3 Port Solenoid Valve Pilot Operated Poppet Type Series VG342 Rubber Seal



Low power consumption

4.8 W DC (Standard type) 2 W DC (Energy-saving type)

No lubrication required


Possible to use in vacuum or under low pressures

External pilot Vacuum: Up to -101.2 kPa Low pressure: 0 to 0.2 MPa


Changeable actuation:

N.C., N.O., or external pilot Can be used as a selector or divider valve (External pilot)



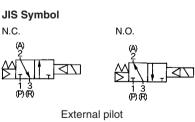




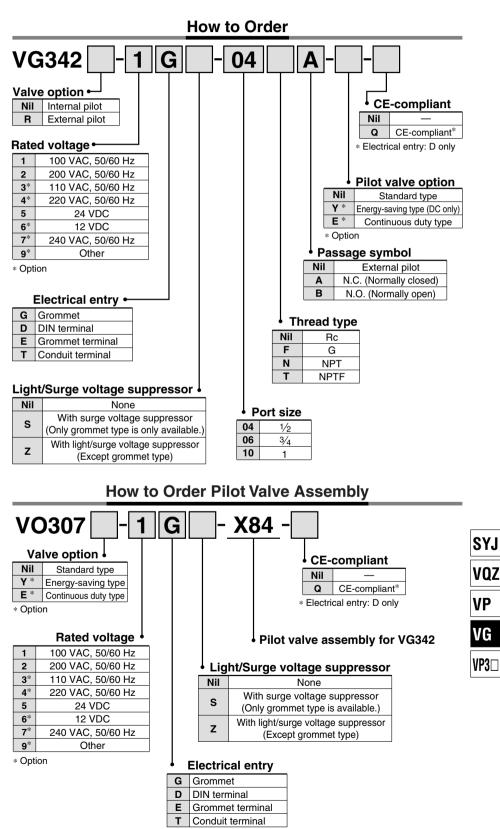

Series VG342


▲ Caution

Light/Surge Voltage Suppressor

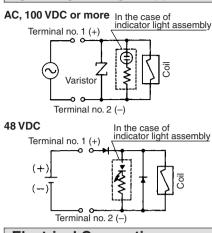

Electrical Connection

In the case of DIN terminal and terminal (with light/surge voltage suppressor), the connection is as follows. Connect each to the power supply side.

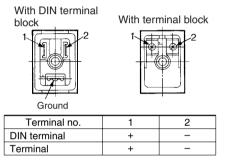

How to Change Passage State

х

M4×0.7 NC NO S g \bigcirc \odot 6 N NС Х × N.C. N.O. External pilot

When changing the passage state, confirm that pressure has been removed from the valve

Unscrew the M4 x 0.7 hexagon socket head cap screw in the changeover plate and match the < mark on the adapter plate with the character on the changeover plate. Piping is as follows.

Mounting Screw Tightening Torques M4: 1.4 N·m

Pipina

i iping						
Passage Port	P	Α	R			
N.C.	Inlet	Outlet	Exhaust side (Plug, in case of 2 port valve)			
N.O.	Exhaust side (Plug, in case of 2 port valve)	Inlet				
External	Universal porting (Piping of inlet pressure side is possible anywhere)					

Note 1) In the case of internal pilot, confirm that a plug is inserted to X port. If not, insert a R 1/8 plug.

Note 2) In the case of external pilot, supply air pressure from X port.

Confirm the safety sufficiently and conduct carefully when changing the passage state or restarting after changes.

Specifications

•••••					
Type of actuation	In common between N.C. and N.O.				
Operation	Internal pilot type External pilot type				
Operating pressure range	0.2 to 0.9 MPa	-101.2 kPa to 0.9 MPa			
External pilot pressure	_	Equivalent operating pressure Min. 0.2 MPa			
Response time ⁽¹⁾	30 ms or less (at the pressure of 0.5 MPa)				
Max. operating frequency	5 c/s (Min. operating frequency: 1 c/30 days based on JIS B 8374-198				
Ambient and fluid temperature	Max. 50°C				
Lubrication	Not required (Use turbine oil Class 1 ISO VG32, if lubricated.				
Manual override	Push typ	e (Non-locking)			
Mounting orientation	Unrestricted				
Shock/Vibration resistance (m/s ²) (2)	(2) 150/50				
Mass	1.1 kg *				

For grommet type

Note 1) Based on dynamic performance test JIS B 8374-1981. (Coil temperature 20°C, at rated voltage, without surge voltage suppressor) Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the

- axial direction and at the right angles to the main valve and armature in both energized and de-energized states every once for each condition. (Values at the initial period)
- Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 1000 Hz. Test was performed at both energized and de-energized states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)

Flow Characteristics

		Flow characteristics											
Port size	1	$1 \rightarrow 2 (P \rightarrow A)$			$2 \rightarrow 3 (A \rightarrow R)$			$2 \rightarrow 1 (A \rightarrow P)$			$3 \rightarrow 2 (R \rightarrow A)$		
	C [dm ³ /(s·bar)]	b	Cv	C [dm³/(s·bar)]	b	Cv	C [dm³/(s·bar)]	b	Cv	C [dm ³ /(s·bar)]	b	Cv	
1/2	26	0.38	7.0	27	0.37	7.4	27	0.36	7.3	25	0.37	6.8	
3/4	38	0.30	9.8	38	0.32	9.8	40	0.22	9.8	40	0.20	9.6	

Port size	Effective area (mm ²)				
	$1 \rightarrow 2 (P \rightarrow A)$	$2 \rightarrow 3 (A \rightarrow R)$			
1	210	235			

Pilot Valve Assembly Specifications

Electrical entry			Grommet (G), Grommet terminal (E), Conduit terminal (T), DIN terminal (D)		
Lead wire color			100 VAC: Blue, 200 VAC: Red, 24 VDC: Red/Black		
Enclosure			Dusttight		
		50/60 Hz)	100, 200, 110*, 220*, 240*		
Coil rated voltage (V)	DC		24, 12*		
Allowable voltage fluctuation			-15 to +10% of rated voltage		
Note)	AC	Inrush	12.7 (50), 10.7 (60)		
Apparent power VA (Hz)		Holding	7.6 (50), 5.4 (60)		
Power consumption Note)	ower consumption Note) DC		4.8 W, 5 W (With indicator light)		
• Option					

Option Note) At rated voltage

Option

Use "Energy-saving type" if low power consumption is required for electronic control.

Specifications different from standard are as follows.					
Power consumption	2 W DC, 2.2 W (With indicator light)				

Use "Continuous duty type" if energizing the valve for a long time.

Specifications different from standard are as follows.


aifiantiona different from standard are as follows


Apparent power VA (Hz) ^{Note)}	AC	Inrush	7.9 (50), 6.2 (60)
	AC	Holding	5.8 (50), 3.5 (60)
Power consumption Note)	[00	2 W, 2.2 W (With indicator light)

Note) At rated voltage



Construction

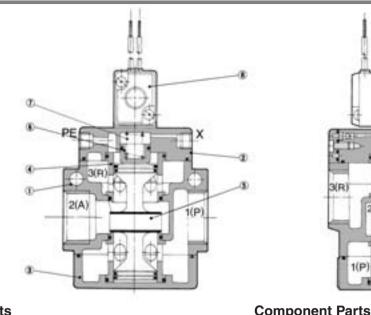

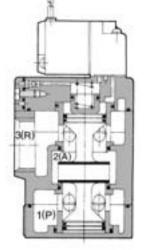

Component Parts

No.	Description	Material	Note	No.	Description	Material	Part no.
1	Body			8	Pilot valve assembly	—	VO307□-□□□-X84
2	Adapter plate	Aluminum alloy	Color: Platinum silver		א For "How to Order Pil	ot Valve Assembly", ref	er to page 1489.
3	End plate			. 64			
(4)	Retainer	Brass					
5	Spool valve	Aluminum alloy/NBR			Caution		
6	Piston	Resin			Mounting Screw T	iahtenina Toraues	M4: 1.4 N⋅m
$\overline{\mathcal{O}}$	Spring	Stainless steel				ignicining reriquee	

/!\ Precautions

- Be sure to read before handling.
- Refer to front matters 58 and 59 for Safety Instructions and pages 3 to 7 for 3/4/5 Port Solenoid
- Valve Precautions.

▲ Caution

Precautions

- 1. Since PE port is the exhaust port of the pilot valve, do not attach a plug or reduce the port diameter.
- 2. X port is the pressure supply port of the pilot valve and PE port is the exhaust port of the pilot valve. Avoid mismatching when piping.
- 3. The manual portion contains a breather hole for the core. Take proper measures to prevent dust or foreign matter from accumulating in this area.

Continuous Duty

If energizing the valve for a long time, use assembly: "VO307E-DD-X84").

- 1. This model is for continuous duty, not for high cycle rates. But even in low cycle rates, if energizing the valve more than once a day, please consult with SMC.
- 2. Make sure to cycle valve at least once every 30 days.

How to Calculate the Flow Rate

For obtaining the flow rate, refer to front matters 44 to 47.

How to Use DIN Terminal

1. Disassembly

- 1) After loosening the screw (1), then if the housing (2) is pulled in the direction of the screw, the connector will be removed from the body of equipment (solenoid, etc.).
- 2) Pull the screw (1) out of the housing (2).
- 3) On the bottom part of the terminal block (3), there's a cut-off part (9). If a small flat head screwdriver is inserted between the opening in the bottom, terminal block (3) will be removed from the cover (2). (Refer to Figure (1).)
- 4) Remove the cable gland (4) and plain washer (5) and rubber seal (6).

2. Wiring

- 1) Pass them through the cable (7) in the order of cable ground (4), washer (5), rubber seal (6), and then insert into the housing (2).
- 2) From the terminal block (3), loosen the screw (11), then pass the lead wire (10) through, then again tighten the screw (11).
- Note 1) Tighten within the tightening torque of 0.5 N·m ±15%.
- Note 2) Cable (7) external: 6 to 8 mm


3. Assembly

1) Passing through the cable (7), the cable gland (4), plain washer (5), and

rubber seal (6), housing (2) in this order, and then connect with the terminal block (3). After that, set the terminal block (3) on the housing (2). (Push it down until you hear the click

Part no. VO307□-□□-X84(-Q)*

- sound.) 2) Putting rubber seal (6), plain washer (5), in this order into the cable introducing slit on the housing (2), then further tighten the cable gland (4) securely.
- 3) Insert the gasket (8) or between the bottom part of terminal block (3) and a plug attached to equipment, and then screw (1) in from the top of the housing (2) to tighten it.
- Note 1) Tighten within the tightening torque of 0.5 N·m ±20%.
- Note 2) Connector orientation can be changed by 180 degrees depending on how to assemble the housing (2) and the terminal block (3).

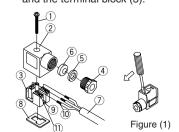




SYJ VOZ VP VG


VP3

Series VG342

Dimensions

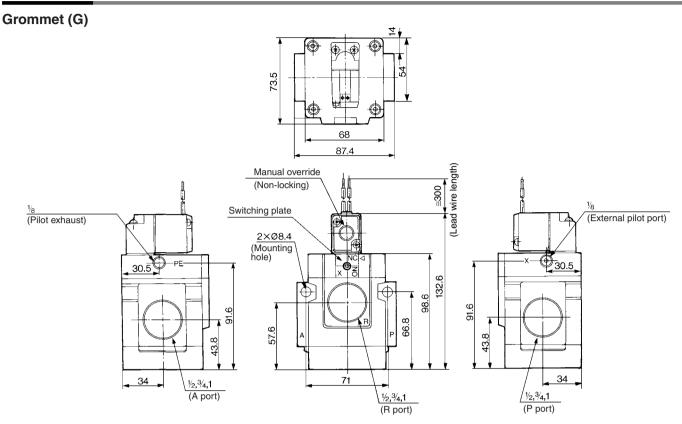


Grommet terminal (E)

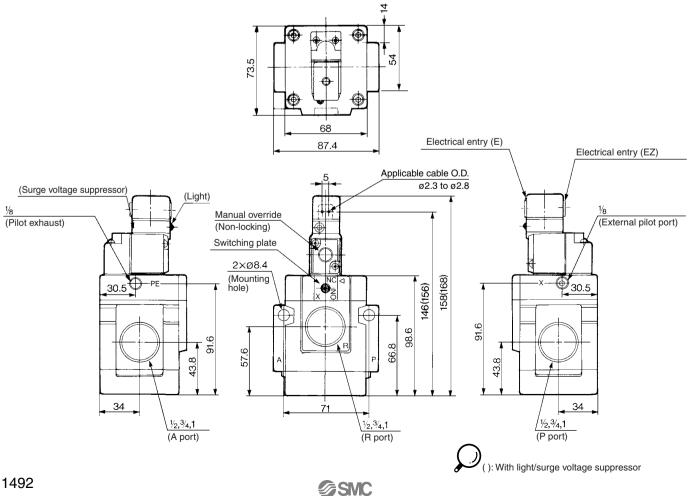

3 Port Solenoid Valve Pilot Operated Poppet Type Series VG342

Dimensions

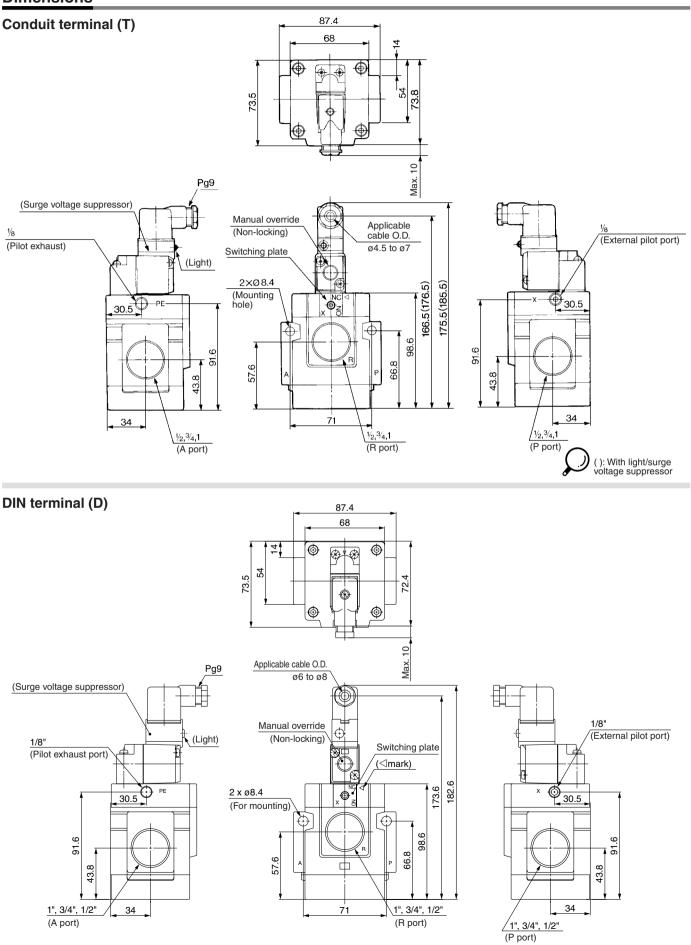

SMC

1493

SYJ


VQZ

VP

VG

VP3🗆



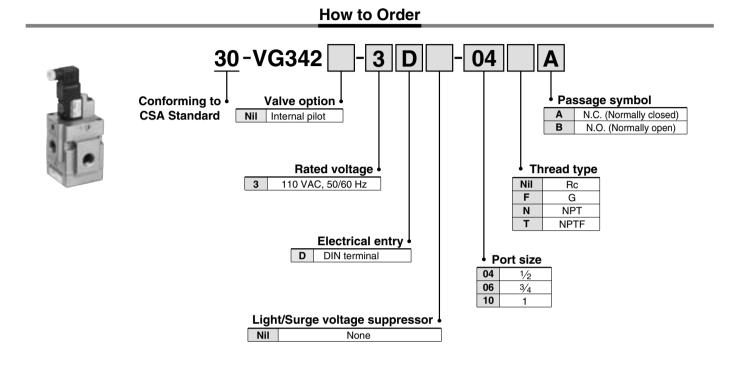

Please refer to the standard model for product specifications, dimensions, and model selection.