
3 Port Solenoid Valve

Series S070

Rubber Seal



- Valve width 7 mm
- Mass 5 g (single unit valve)
- Power consumption 0.35 W (Standard),
 - 0.1 W (With power saving circuit)
- \bullet Operation noise 38 dB (A) or less
- Sonic conductance: C 0.083 [dm³/(s·bar)]
- Stacking type manifold

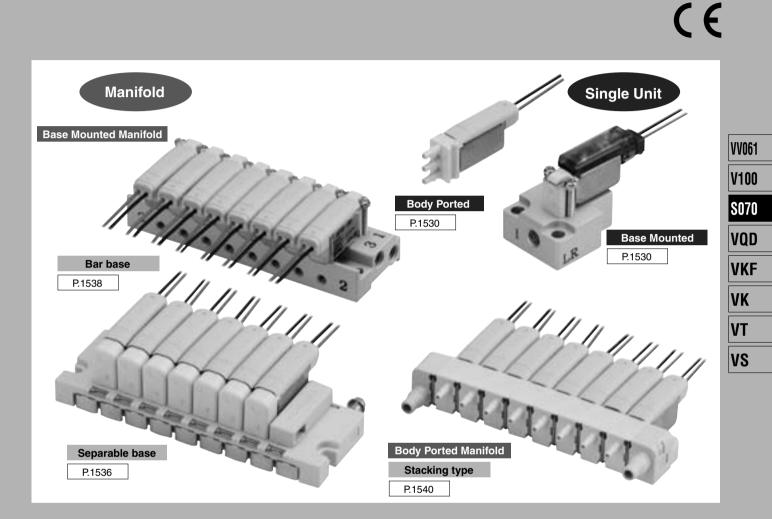

Separable base




Stacking type



3 Port Solenoid Valve Compact Direct Operated Series S070

CE

How to Order Valve

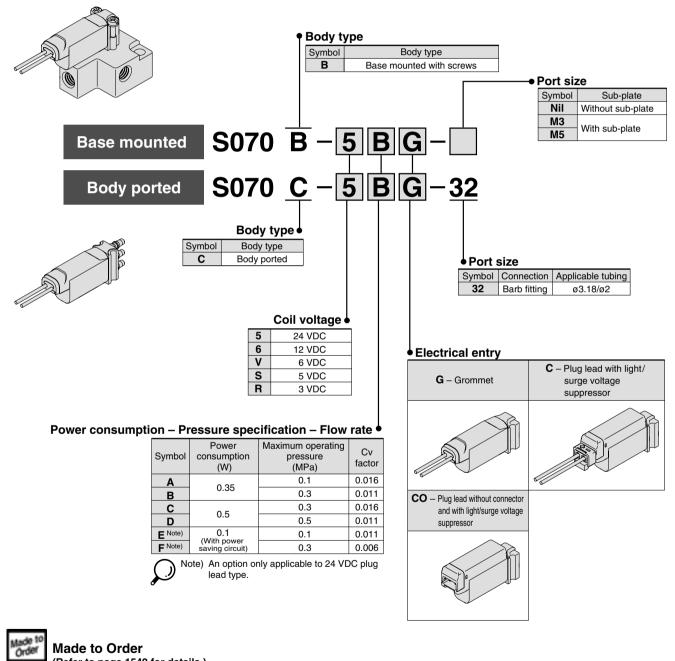


	(Refer to page 1542 for details.)						
Symbol	Specifications/Content						
X26	Grommet type, Special lead wire length						
X50 Universal type							

X62 Normally open type

3 Port Solenoid Valve Compact Direct Operated Series S070



JIS Symbol



opeemeations	
Valve construction	Poppet
Fluid	Air/Inert gas/Low vacuum (1.33 x 10 ² Pa)
Maximum operating pressure	0.3 MPa (0.35 W, 0.1 W), 0.5 MPa (0.5 W)
Proof pressure	1 MPa
Ambient and fluid temperature Note 1)	-10 to 50°C
Lubrication	Not required
Impact/Vibration resistance Note 2)	30/150 m/s ²
Enclosure	IP40
Mass	5 g (Single unit valve)
Mounting orientation	Free



Note 1) Use dry air and prevent condensation at low temperatures.

Note 2) Vibration resistance: No malfunction resulted in 45 to 2000 Hz, a one-sweep test performed in the axial and right angle directions of the main valve and armature for both energized and de-energized states. Impact resistance: No malfunction resulted in an impact test using a drop impact tester. The

test was performed one time each in the axial and right angle directions of the main valve and armature, for both energized and de-energized states. Note 3) With the low vacuum specification, the operating pressure range is 1.33 x 10² Pa to the maximum

operating pressure.

Solenoid Specifications

Power consumption Note 1)	0.35 W (Standard), 0.5 W (High voltage), 0.1 W (Holding)					
Rated coil voltage	3, 5, 6, 12, 24 VDC					
Allowable voltage fluctuation	$\pm 10\%$ of the rated voltage					
Coil insulation type	Equivalent to class B					



Specifications

Note 1) With a light/surge voltage suppressor and power saving circuit, the light consumes a power equivalent to 2 mA.

Flow Specifications/Response Time

Power concumption	Maximum operating	F	low characteristic	Response time ms Note 2)			
Power consumption	pressure	C[dm³/(s·bar)]	b	Cv	ON	OFF	
	0.5 MPa	0.042	0.27	0.011	3 or less	3 or less	
0.5 W DC	0.3 MPa	0.060	0.28	0.016	5 or less	3 or less	
0.35 W DC	0.3 MPa	0.042	0.27	0.011	3 or less	3 or less	
0.35 W DC	0.1 MPa	0.060	0.28	0.016	5 or less	3 or less	
0.1 W DC (at holding)	0.3 MPa	0.021	0.27	0.006	3 or less	6 or less	
with power saving circuit Note 1)	0.1 MPa	0.042	0.28	0.011	5 or less	6 or less	

Note 1) 0.35 W DC at inrush (100 ms) and 0.1 W DC at holding.

Note 2) The response time is the value at the rated voltage and maximum operating pressure.




Series S070

Construction


Component Parts

Number	Description	Material
1	Solenoid coil	—
2	Body	Resin
3	Core	Stainless steel
4	Armature assembly	Stainless steel, resin
5	Return spring	Stainless steel
6	Poppet	FKM
7	Interface gasket	HNBR
8	Mounting screw	Carbon steel
9	Sub-plate	Aluminum

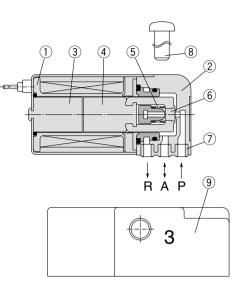


* The above figure is an example of S070B-


Replacement Parts

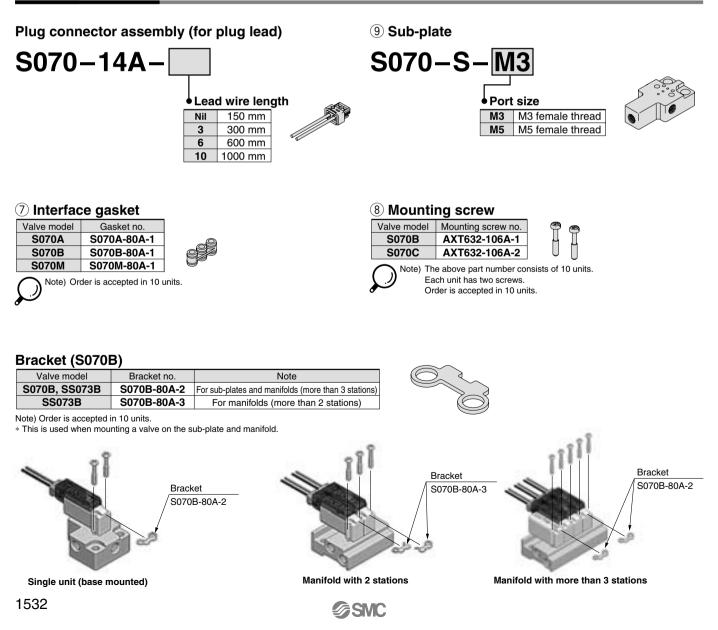

Base mounted with screws

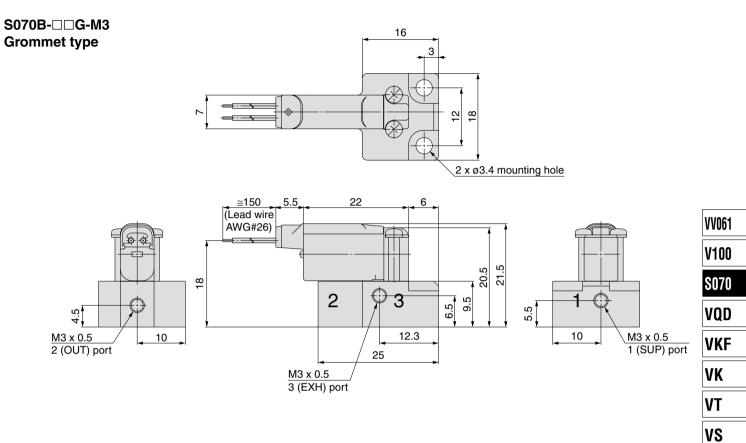

S070B-□□C-M3 Plug lead type

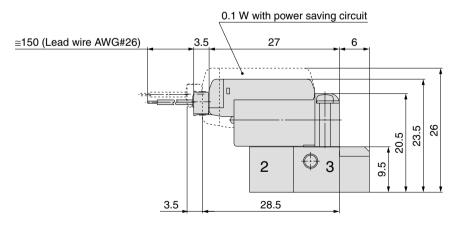


Series S070


Dimensions

Base mounted with screws

S070B-□□G-M5 Grommet type

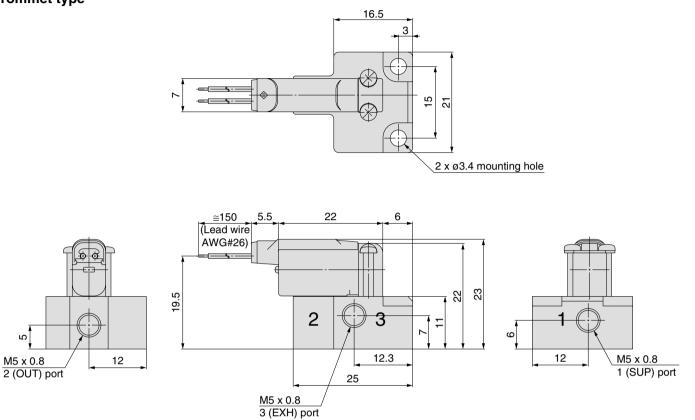


S070B-□□C-M5 Plug lead type

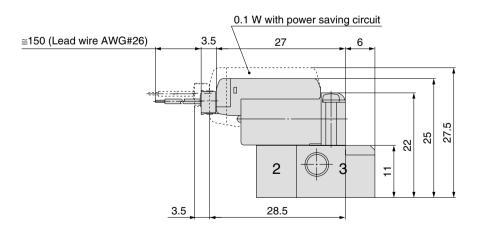


Body ported

S070C-□□G-32 Grommet type

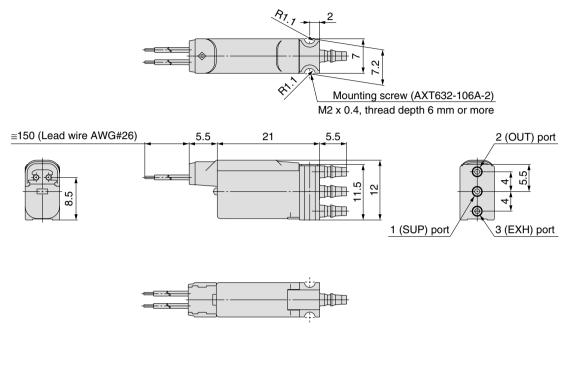

S070C-□□C-32 Plug lead type

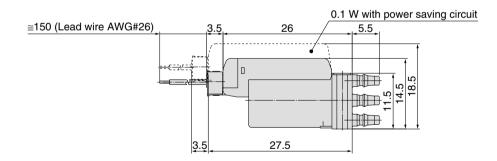

VV061

V100

S070

VQD

VKF


VK

VT


VS

3 Port Solenoid Valve Series S070/Base Mounted Manifold **Separable Base Type**

How to Order Manifold

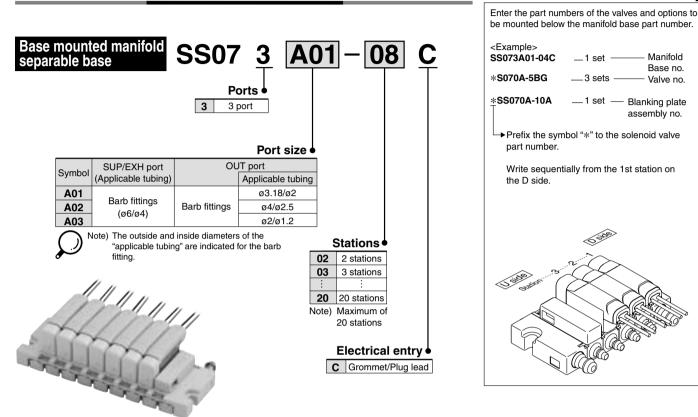

How to Order Valves

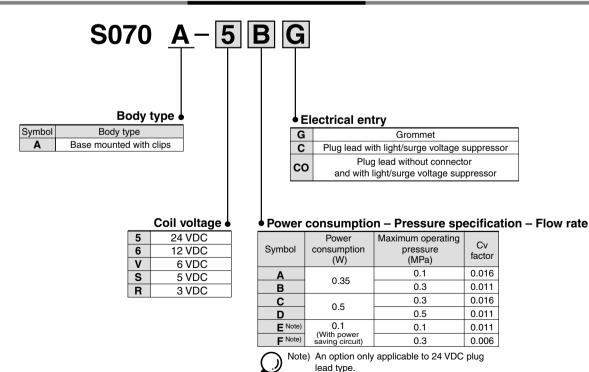

.... 1 set --

.... 3 sets -

5300

___1 set ___ Blanking plate

Manifold


Base no.

Valve no

assembly no.

Base mounted manifold/Separable base

SS073A₀₂⁰¹- Stations C

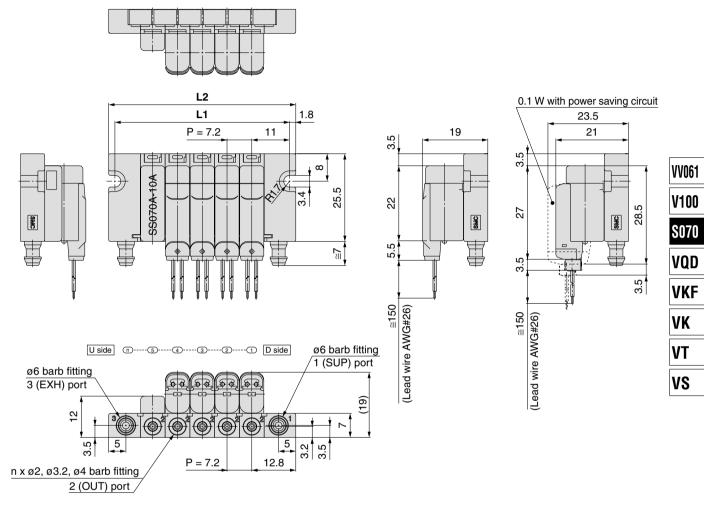


-						
11		m	~	າຕ	10	nc
ப				13	IU	ns
_	-					


L n	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	29.2	36.4	43.6	50.8	58	65.2	72.4	79.6	86.8	94	101.2	108.4	115.6	122.8	130	137.2	144.4	151.6	158.8
L2	32.8	40	47.2	54.4	61.6	68.8	76	83.2	90.4	97.6	104.8	112	119.2	126.4	133.6	140.8	148	155.2	162.4

3 Port Solenoid Valve Series S070/Base Mounted Manifold **Bar Base Specifications**

How to Order Manifold

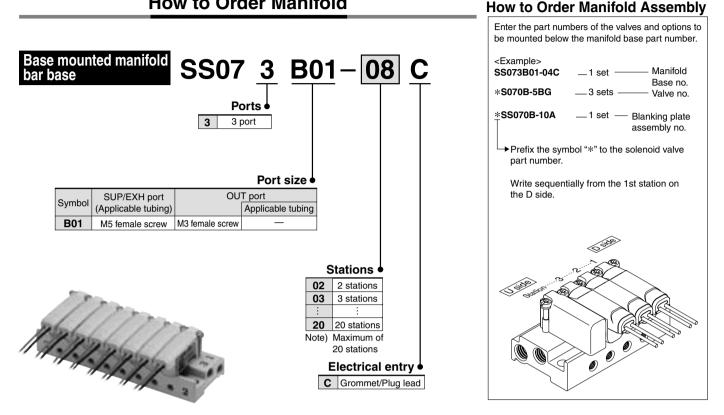


How to Order Valves

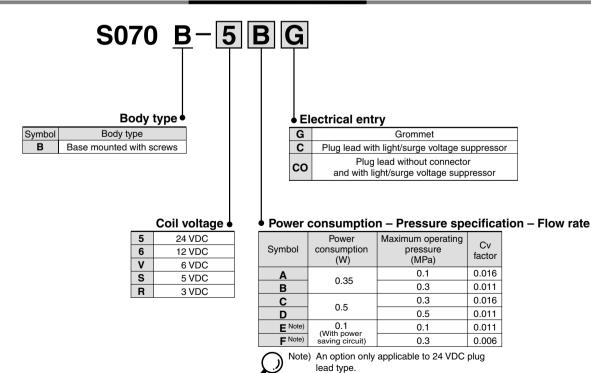

Base mounted manifold/Bar base

SS073B01-Stations C

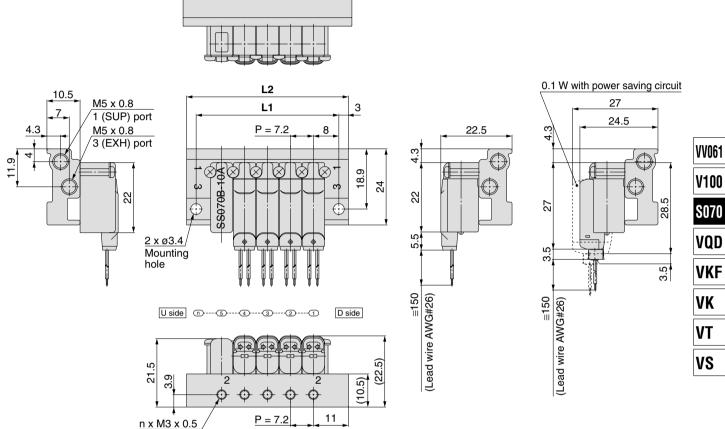


<u> </u>	X IVI3 X U.5 /	
2	(OUT) port	


Dimensio	Dimensions Formulas: L1 = n x 7.2 + 8.8, L2 = n x 7.2 + 14.8, n: Stations (maximum 20 stations)													ations)					
L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	23.2	30.4	37.6	44.8	52	59.2	66.4	73.6	80.8	88	95.2	102.4	109.6	116.8	124	131.2	138.4	145.6	152.8
L2	29.2	36.4	43.6	50.8	58	65.2	72.4	79.6	86.8	94	101.2	108.4	115.6	122.8	130	137.2	144.4	151.6	158.8

3 Port Solenoid Valve Series S070/Base Mounted Manifold **Stacking Type Specifications**

How to Order Manifold

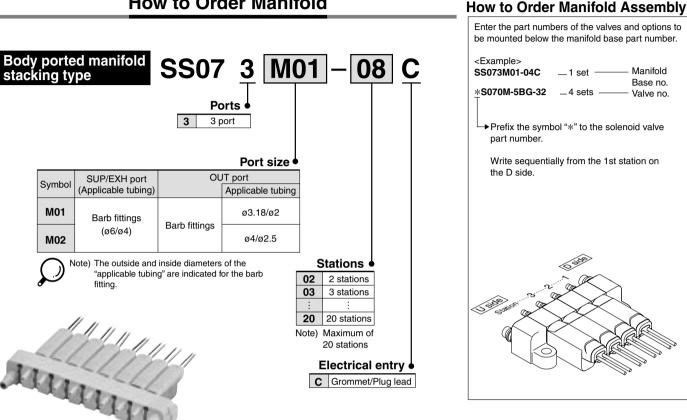


How to Order Valves

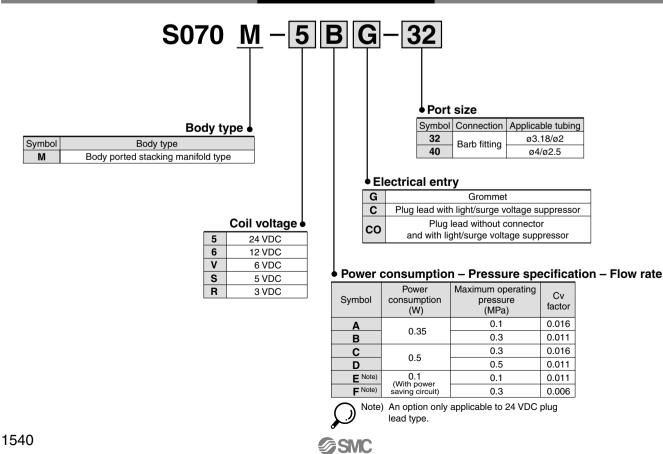

Body ported stacking type manifold


SS073M₀₂⁰¹-Stations C

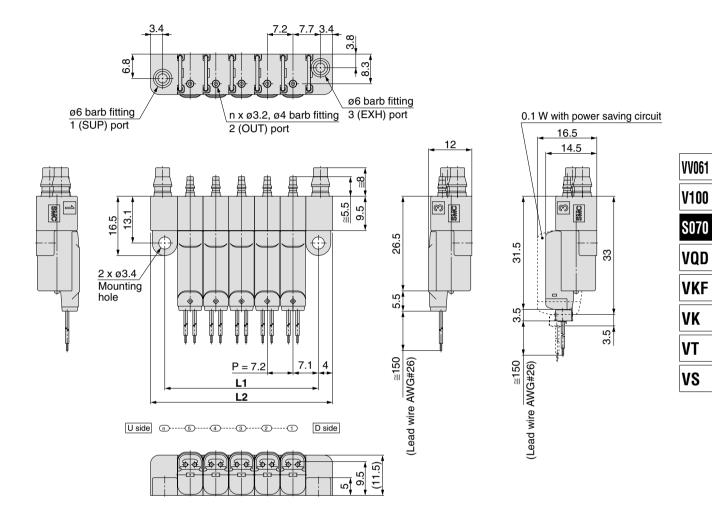

Dimensio	DimensionsFormulas: L1 = n x 7.2 + 7, L2 = n x 7.2 + 15, n: Stations (maximum 20 stations)												ations)						
Ln	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	21.4	28.6	35.8	43	50.2	57.4	64.6	71.8	79	86.2	93.4	100.6	107.8	115	122.2	129.4	136.6	143.8	151
L2	29.4	36.6	43.8	51	58.2	65.4	72.6	79.8	87	94.2	101.4	108.6	115.8	123	130.2	137.4	144.6	151.8	159

Series S070 Made to Order

Please contact SMC for detailed specifications, dimensions and delivery.

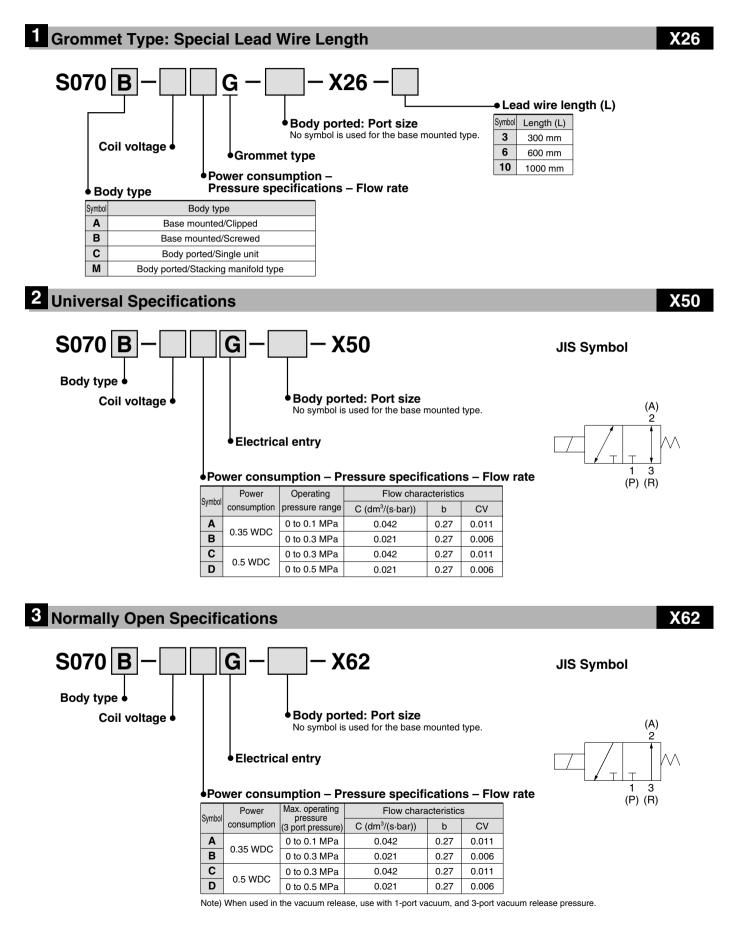


SMC

Manifold Options

Blanking plate assembly (for SS073A)

SS070A-10A (for separable base)


This assembly is mounted on a manifold block where the valve is removed for maintenance or a replacement valve is going to be mounted.

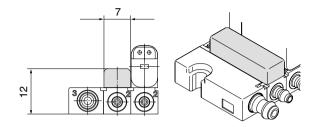

Blanking plate assembly (for SS073B)

SS070B-10A (for bar base)

This assembly is mounted on a manifold block where the valve is removed for maintenance or a replacement valve is going to be mounted.

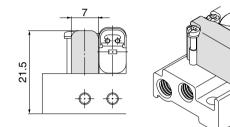

7.2

VV061 V100 S070 VQD VKF VK VK


VS


Intermediate block assembly (for SS073A)


SS070A-B (for separable base)


This assembly is used to secure the manifold when a large number of stations are manifolded. (Accommodated as one station.)

 In the manifold specification sheet, specify the position where the block assembly is mounted.

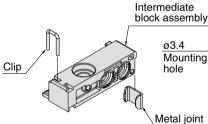

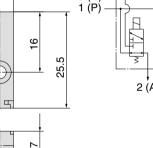


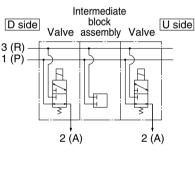

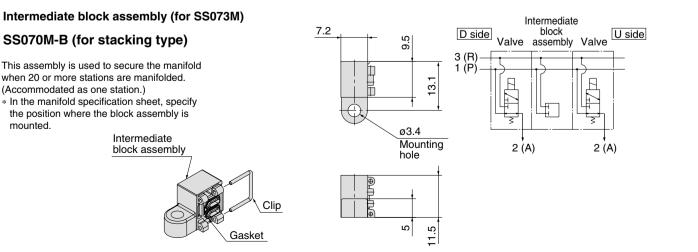

Series S070 Exploded View of Stacking Type

Body Ported Type/SS073M01-□C Exploded View of Stacking Type

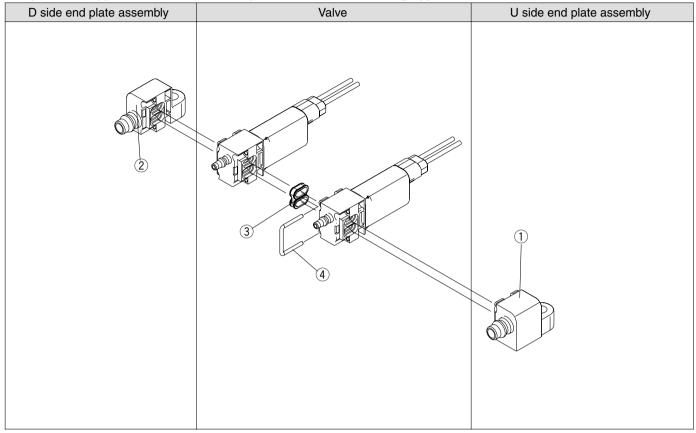

< U End Plate Assembly >

1 U end plate assembly no.

SS070M01-2A

< D End Plate Assembly >

2 D end plate assembly no.


SS070M01-3A

Replacement Parts

No.	Part no.	Description	Material	Number
3	S070M-80A-1	Gasket	FKM	10
(4)	SS070M-80A-2	Clip	Stainless steel	10

Series S070 Exploded View of Separable Base

Base mounted/SS073A□-□C Exploded View of Separable Base

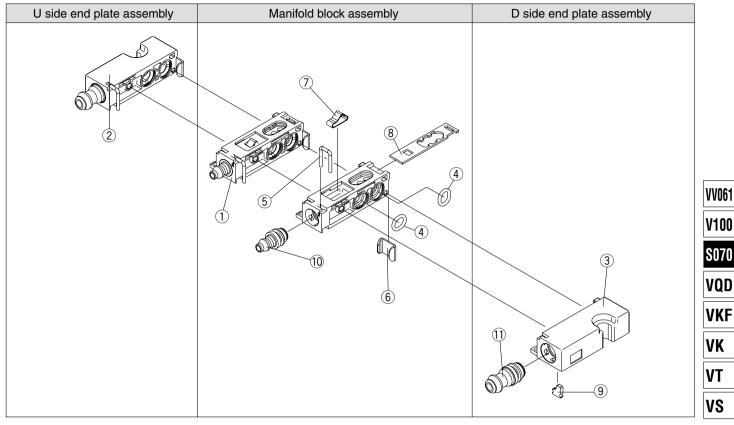

< Manifold Block Assembly >

1 Manifold block assembly no.

SS070A 01 -1A			
	01 With ø3.18/ø2 barb fitting		
	02	With ø4/ø2.5 barb fitting	

< U Side End Plate Assembly >

② U side end plate assembly no.

SS070A01-2A

< D Side End Plate Assembly >

③ D side end plate assembly no.

SS070A01-3A

< Replacement Parts for Manifold Block > Replacement Parts

No.	Part no.	Description	Material	Number
4	SS070A-80A-1	O-ring	FKM	10
5	SS070A-80A-2	Clip	Stainless steel	10
6	SS070A-80A-3	Metal joint	Stainless steel	10
$\overline{)}$	SS070A-80A-4	Leaf spring	Stainless steel	10
8	SS070A-80A-5	Mounting bracket	Stainless steel	10


<Replacement Parts for U/D End Plate>

Replacement Parts

No.	Part no.	Description	Material	Number
9	SS070A-80A-6	Stopper plate	Stainless steel	10

< Barb Fitting Assembly >

10 Barb fitting assembly (for cylinder port)

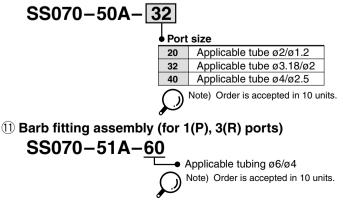



Series S070 Specific Product Precautions 1

Be sure to read before handling. Refer to front matters 58 and 59 for Safety Instructions and pages 3 to 7 for 3/4/5 Port Solenoid Valve Precautions.

ACaution Valve Mounting/Removal

1) Base mounted with screws

With the base mounted type fixed with screws, confirm the installation of the gasket mounted on the body interface and fasten the dedicated mounting screws (AXT632-106-1) at an appropriate torque (0.10 to 0.14 Nm). (Fasten equally so that the valve will not tilt.)



2) Base mounted with clips


① Hook a flat head watchmakers' screwdriver into the hole of the metal bracket and pull it approximately 1 mm in the direction indicated by the arrow. ② Insert the solenoid valve from above. After confirming that the bottom surface of the solenoid valve contacts the top surface of the manifold, detach the flat head screwdriver from the mounting bracket while holding the solenoid valve body.

(Before mounting, confirm the installation of the interface gasket on the solenoid valve body.)

The built-in leaf spring returns the mounting bracket to its original position.

(Then confirm that the end of the mounting bracket is aligned with the side of the manifold block. Refer to the figure below.)

Similarly, to remove the valve, pull the mounting bracket and pull up the solenoid valve vertically. Use caution so that no excessive force is applied to the lead wire in mounting and removal.

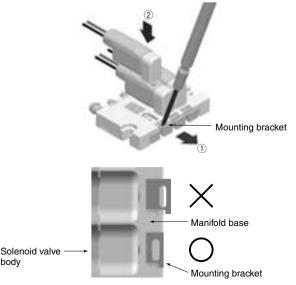

Caution Screwing in M5/M3 Thread

After tightening by hand, tighten an additional 1/4 rotation for M3 and 1/6 rotation for M5. Overtightening may cause bending of the thread or air leakage due to deformation of the gasket. Insufficient screwing may cause loosening of the thread or air leakage.

Applicable Tubing Size

Stacking manifold


Port	Applicable tubing	Recommended tubing	
1 (SUP), 3 (EXH)	ø6/ø4	TS0604/TU0604	
	ø4/ø2.5	TS0425/TU0425	
2 (OUT)	ø3.18/ø2	TIUB01	

Note) In case of a body ported single unit valve, the applicable tubing size is ø3.18/ø2 for all 1 (SUP), 2 (OUT), and 3 (EXH) ports.

If fittings of a brand other than SMC are used, follow the specifications of the fittings to be mounted.

Tubing Installation (With barb fitting)

- 1) Using tubing cutters TK-1, 2, or 3, cut the tubing perpendicularly to the tubing axis while allowing for sufficient margin to the required length.
- 2) Insert the tubing and push it all the way to the barb end. If the tubing is not installed securely to the end, problems such as leakage or disconnection of the tubing can occur.
- 3) When the tubing is inserted into the barb fitting, push it in the direction of the tubing axis to prevent excessive lateral loads being applied to the barb fitting.

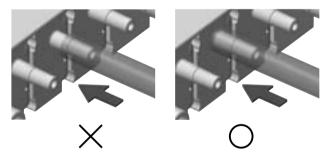

- 4) To remove the tubing from the barb fitting, use caution so that no excessive lateral load will be applied to the barb fitting. When using a cutter to remove the tubing, sufficient care should be taken so as not to make any flaws on the barb fitting.
- 5) After tubing installation, avoid excessive loads, such as tensile, compressive, or bending strength, being applied to the tubing.




Series S070 Specific Product Precautions 2

Be sure to read before handling. Refer to front matters 58 and 59 for Safety Instructions and pages 3 to 7 for 3/4/5 Port Solenoid Valve Precautions.

1) Solenoid valve fixing procedure (body ported single unit)

When mounting a body ported type single unit valve, tighten the dedicated mounting screw (AXT632-106A-2) at an appropriate torque (0.05 to 0.07 N·m) to firmly secure the valve body. (Tighten equally so that the valve will not tilt.) If the coil is fixed, the coil joint may break due to application of an excessive load to the tubing body, for example, when the tubing is inserted. With a base mounted type solenoid valve also, use caution to avoid excessive loads on the coil and lead wire.

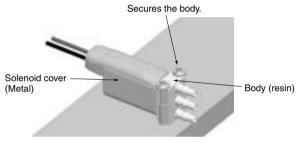


Adding and Removing Manifold Stations

1) Base mounted stacking type

- Remove the clip and metal joint from the position where the new station is to be mounted by pulling them in the directions indicated by the arrows.
- ② Place the additional manifold block assembly and mount the metal joint and clip by reversing the assembly order. Securely insert the clip and the metal joint so that they will not protrude from the top and bottom surfaces respectively.

The clip is commonly used to secure the manifold block and fittings.

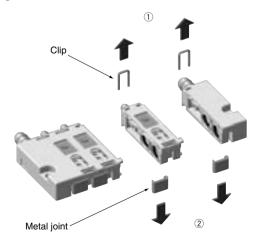


To remove the station, follow the same procedure for assembly and disassembly.

2) Body ported manifold type

- Remove the clip on the position where the station is to be added by pulling it in the direction indicated by the arrow. (Insert a flat head screwdriver in the recess indicated in the figure to remove the clip.)
- 2 Place the additional solenoid valve into the separation and insert the clip.

Insert the clip until it fits in the groove on the body side.

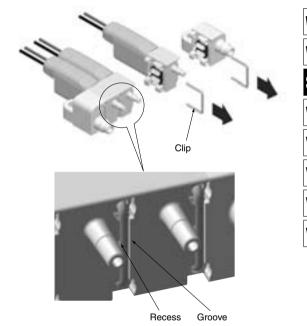


ACaution Vacuum Application

An N.C. type valve pressurized at 1 (SUP) port can be used within the maximum operating pressure differential specified for the product. If the valve is to be used in the following applications, however, care should be taken about the piping ports, maximum operating pressure differential and allowable leakage.

1) Vacuum release application

Use 3 (R) port for vacuum pressure and 1 (P) port for vacuum release pressure. The pressure differential between 3 (R) and 1 (P) is the maximum operating pressure differential for each type.



2) Vacuum retention

Please consult SMC if the allowable leakage is limited when the valve is used for vacuum retention of a vessel, even within the low vacuum range (1.33×10^2 Pa or above).

VV061 V100 S070 VQD VKF VK VT VS



Series S070 Specific Product Precautions 3

Be sure to read before handling. Refer to front matters 58 and 59 for Safety Instructions and pages 3 to 7 for 3/4/5 Port Solenoid Valve Precautions.




1) Internal wiring


• Grommet (This solenoid valve has no polarity.)



• With light/surge voltage suppressor (This solenoid valve has no polarity.)



• With 0.1 W power saving circuit




2) Electrical circuit

- Adopt an electrical circuit with no chattering generated at the contact.
- (2) Keep the voltage within the $\pm 10\%$ range of the rated voltage.

Care should be taken about the voltage drop when the rated voltage is 6 VDC or less or when the response speed is important.

(3) When using a C-R element (surge voltage suppressor) for protection of the switching element, please keep in mind that leakage voltage will increase due to leakage current flowing through the C-R element.



Keep the residual leakage voltage with 2% of the rated voltage.

- (4) Be sure to confirm the applied voltage. If a wrong voltage is applied, it can lead to malfunction or coil burning.
- (5) In wiring, use caution to avoid application of excessive force to the lead wire. It can cause malfunction or break the coil.

Caution Power Saving Circuit of 0.1 W DC (At holding)

The power consumption is 0.35 W DC at inrush (100 ms) and 0.1 W DC at holding.