


# Process Pump

## Series PAF3000/series PAF5000

The excellent corrosion resistance is achieved due to the **new PFA wetted material construction!**

PPS/PFA dual construction, withstand pressure and heat cycle performance have been improved.

- **No metallic parts are used (Metal-free), Pump made of all fluoro-resin (Series PAF5000)**

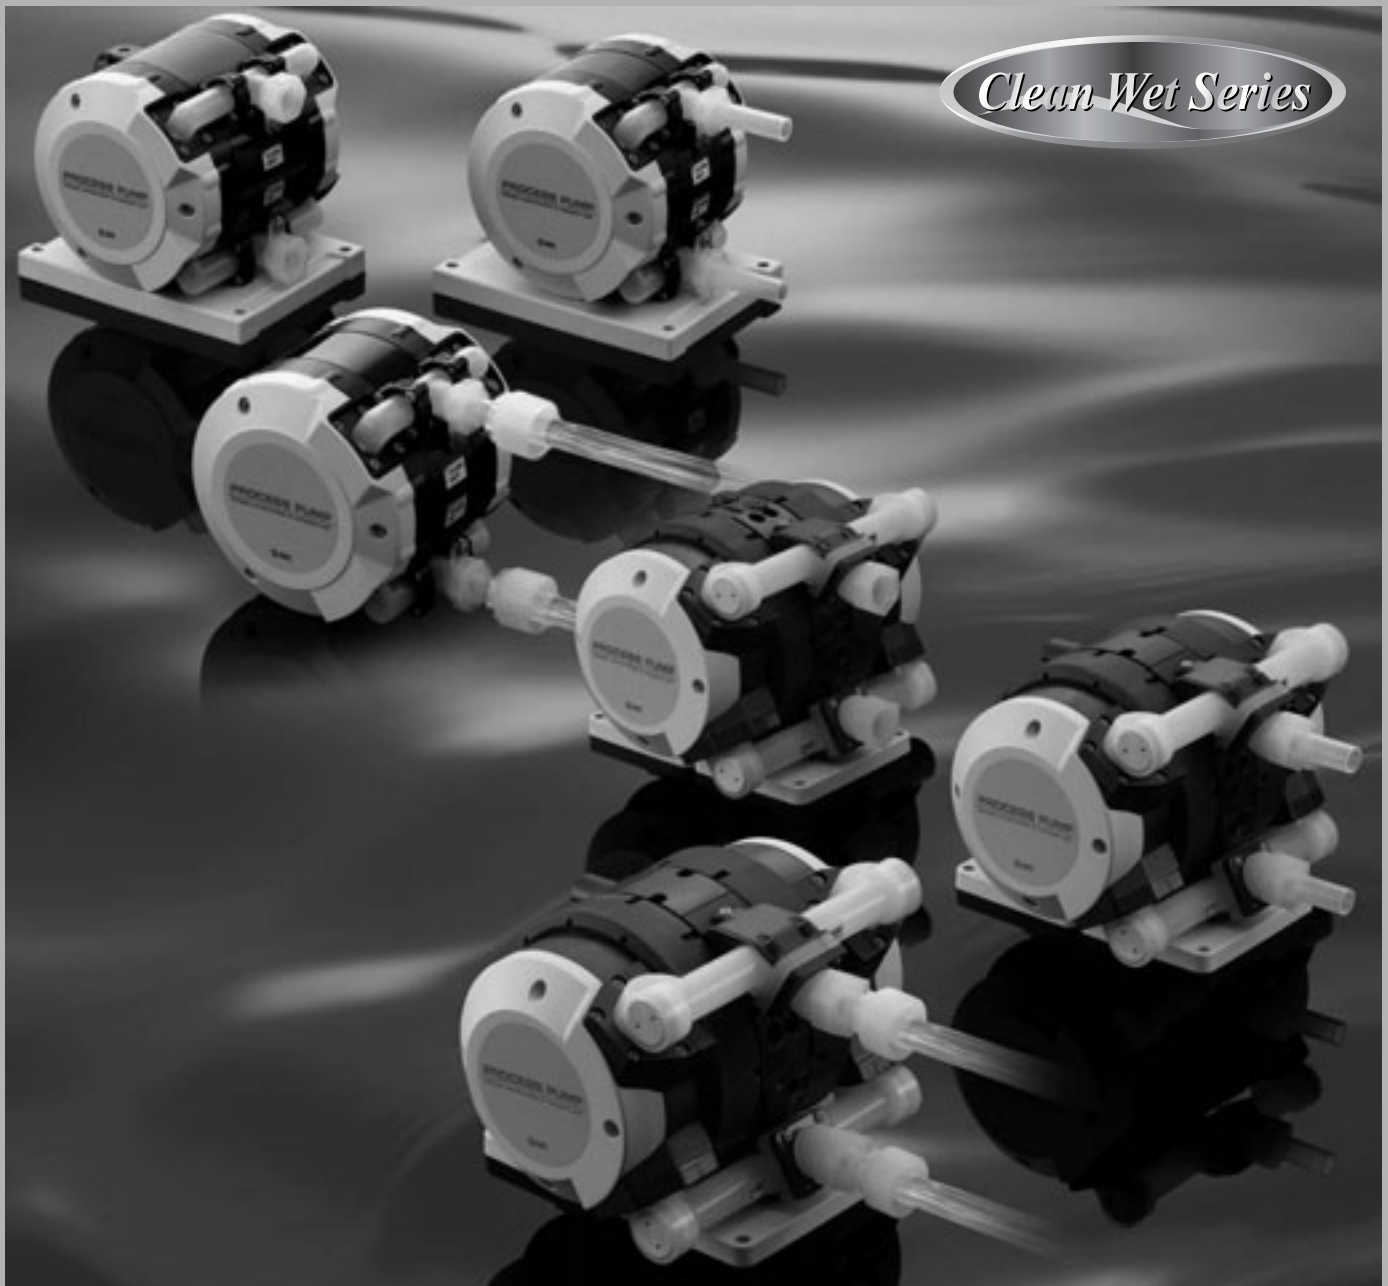

PA

PAP

PAX

PB

**PAF**

PA

PB

- **Max. flow rate: 45 ℓ/min (Automatically operated) (Series PAF5000)**
- **Fitting type: Female thread/Tube extension/With nut (Insert bushing type, Flare type)**

The excellent corrosion resistance is achieved due

to the new PFA wetted material construction!

Body material

Diaphragm/Seal material

New PFA PTFE


Excellent corrosion resistance

One pump is compatible with various fluids.




- Light weight and Compact
- Mass: **1.3 kg**

(PAF3000 / air operated, without foot)

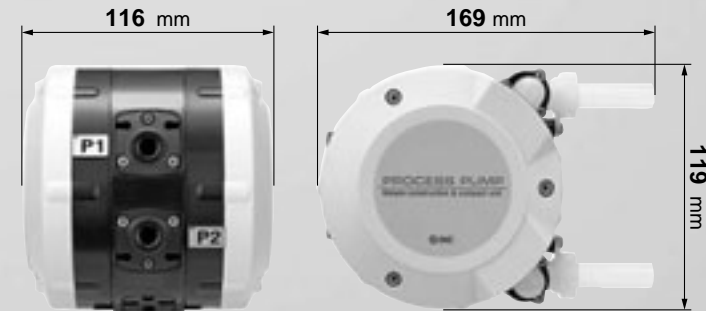


- **PPS/PFA** dual construction
- Withstand pressure and heat cycle performance have been improved.

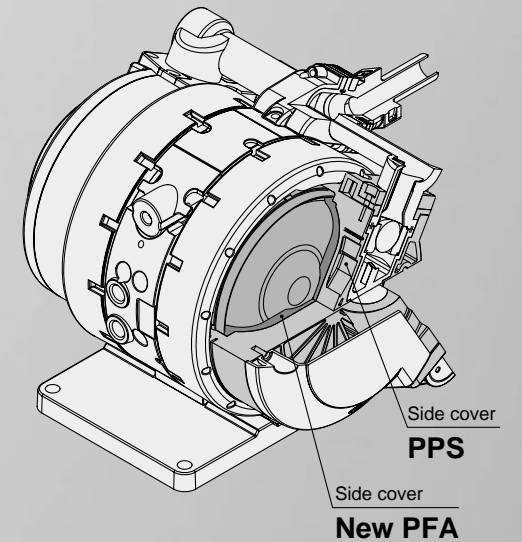

- **Clean**


Assembled in a **clean room** and double-packaged. By using a **molded** side cover and port, it effectively reduces the amount of dust generation.

- Variation on fittings with nut
- Insert bushing type (LQ1 fittings)

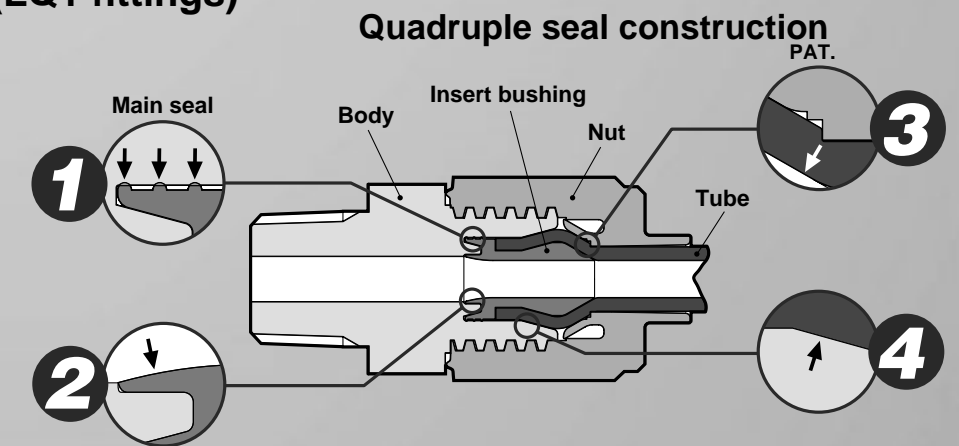

**New**

- Flare type (LQ3 fittings)

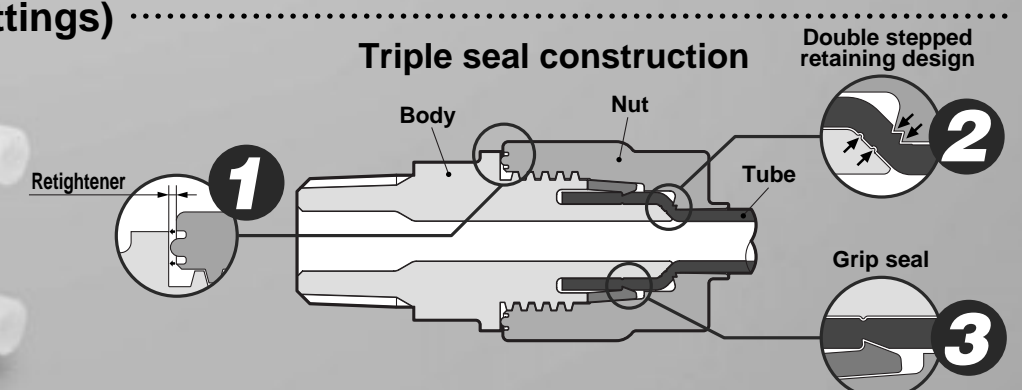

Variation

Model	Body material	Diaphragm material	Discharge flow rate (l/min)	Fitting type	Option
Automatically operated	PAF3410	New PFA	Modified PTFE	Female thread Tube extension With nut	• Foot (Note 1) • Silencer (Note 2)
	PAF5410				
Air operated	PAF3413				
	PAF5413				

Note 1) Equipped with the PAF5000 series as standard equipment. Note 2) Automatically operated only.



PA  
PAP  
PAX  
PB  
PAF  
PA□  
PB

# Process Pump: Automatically Operated Type (Internal Switching Type) Air Operated Type (External Switching Type) Series **PAF3000**

## How to Order

### Female thread



PAF3410-03-

**Actuation** Note 1)

Symbol	Actuation
0	Automatically operated
3	Air operated

**Thread type** Note 2)

Symbol	Type
Nil	Rc
N	NPT
F	G

**Port size**

Symbol	Port size
03	3/8"

**Option**

Symbol	Option	Applicable actuation	
		Automatically operated	Air operated
Nil	None	●	●
B	With foot	●	●
N	With silencer	●	—

\* When option is more than one, suffix in alphabetical order.

### Tube extension



PAF3410-P13-

**Actuation** Note 1)

Symbol	Actuation
0	Automatically operated
3	Air operated

**Tube size**

Symbol	Main fluid connection size
13	1/2"

**Thread type** Note 2)

Symbol	Type
Nil	Rc
N	NPT
F	G

**Option**

Symbol	Option	Applicable actuation	
		Automatically operated	Air operated
Nil	None	●	●
B	With foot	●	●
N	With silencer	●	—

\* When option is more than one, suffix in alphabetical order.

### With nut



PAF3410S-1S13-

**Actuation** Note 1)

Symbol	Actuation
0	Automatically operated
3	Air operated

**Fitting type**

Symbol	Fitting type
1	LQ1
3	LQ3

**Fitting size**

Symbol	IN side	OUT side	Fitting type	
			LQ1	LQ3
13	4		●	●
1319	4	5	●	—
1913	5	4	●	—
19		5	●	—

\* Refer to page 706 for the compatible fittings.


**Option**

Symbol	Option	Applicable actuation	
		Automatically operated	Air operated
Nil	None	●	●
B	With foot	●	●
N	With silencer	●	—

\* When option is more than one, suffix in alphabetical order.

**Thread type** Note 2)

Symbol	Type
Nil	Rc
N	NPT
F	G

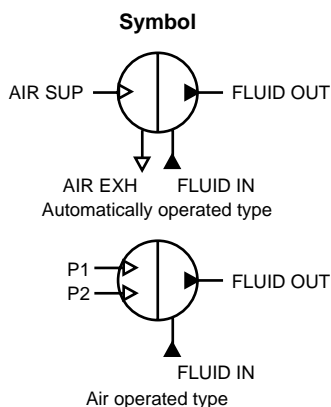

Note 1) The port size of the pilot port is as follows. Automatically operated type is 1/4"; Air operated type is 1/8".

Note 2) The thread type is applied to the pilot port thread and the female thread piping connection.

\* Refer to page 727 for maintenance parts.

\* Refer to pages 728 and 729 for related products.

# Process Pump: Automatically Operated Type (Internal Switching Type) Air Operated Type (External Switching Type) Series **PAF5000**

## How to Order

### Female thread



**PAF5410** - **06** -

#### Actuation <sup>Note 1)</sup>

Symbol	Actuation
0	Automatically operated
3	Air operated

#### Option

Symbol	Option	Applicable actuation	
		Automatically operated	Air operated
Nil	None	●	●
N	With silencer	●	—

#### Thread type <sup>Note 2)</sup>

Symbol	Type
Nil	Rc
N	NPT
F	G

#### Port size

Symbol	Port size
06	3/4"

### Tube extension



**PAF5410** - **P19** -

#### Actuation <sup>Note 1)</sup>

Symbol	Actuation
0	Automatically operated
3	Air operated

#### Option

Symbol	Option	Applicable actuation	
		Automatically operated	Air operated
Nil	None	●	●
N	With silencer	●	—

#### Tubing size

Symbol	Main fluid connection size
19	3/4"

#### Thread type <sup>Note 2)</sup>

Symbol	Type
Nil	Rc
N	NPT
F	G

### With nut



**PAF5410** **S-1S** **19** -

#### Actuation <sup>Note 1)</sup>

Symbol	Actuation
0	Automatically operated
3	Air operated

#### Fitting type

Symbol	Fitting type
1	LQ1
3	LQ3

#### Option


Symbol	Option	Applicable actuation	
		Automatically operated	Air operated
Nil	None	●	●
N	With silencer	●	—

#### Fitting size

Symbol	IN side	OUT side	Fitting type	
			LQ1	LQ3
19	5	5	●	●
1925	5	6	●	—
2519	6	5	●	—
25	6	6	●	—

#### Thread type <sup>Note 2)</sup>

Symbol	Type
Nil	Rc
N	NPT
F	G

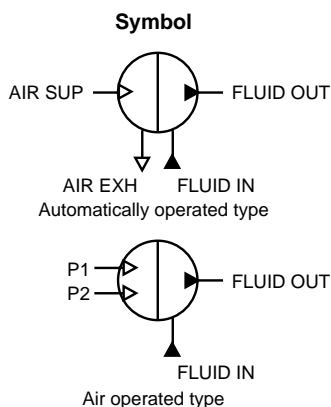

\* Refer to page 706 for the compatible fittings.

Note 1) The port size of the pilot port is 1/4".

Note 2) The thread type is applied to the pilot port thread and the female thread piping connection.

\* Refer to page 727 for maintenance parts.

\* Refer to pages 728 and 729 for related products.

PA  
PAP  
PAX  
PB  
PAF  
PA□  
PB

# Series PAF

## How to Order Fittings for Products with Nut (Series PAF341□S, PAF541□S)


Fittings compatible for the process pump with nut / PAF341□S, PAF541□S.

Product without nut (insert bushing), 1 piece nut removed, which is not necessary in cases when using the products with nut.

### LQ1 fittings

**LQ1E 41 - S**

Fitting type

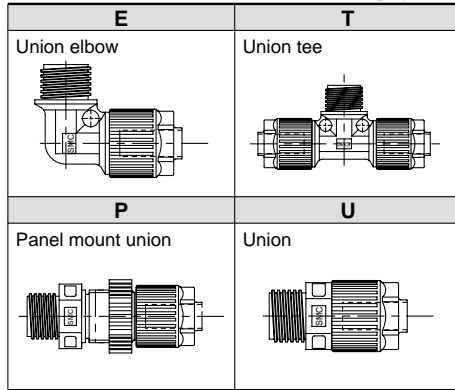

Nut (including insert bushing), 1 location removed

Applicable tubing size

Metric size

Class	No.	Applicable tubing size (mm)	Reducing*	Applicable process pump	
				PAF341□S	PAF541□S
4	1	12 x 10	○	■	—
4	2	10 x 8	●	■	—
5	1	19 x 16	○	■	■
5	2	12 x 10	●	■	■
6	1	25 x 22	○	—	■
6	2	19 x 16	●	—	■

Inch size

Class	Symbol	Applicable tubing size (inch)	Reducing*	Applicable process pump	
				PAF341□S	PAF541□S
4	A	1/2" x 3/8"	○	■	—
4	B	3/8" x 1/4"	●	■	—
5	A	3/4" x 5/8"	○	■	■
5	B	1/2" x 3/8"	●	■	■
6	A	1" x 7/8"	○	—	■
6	B	3/4" x 5/8"	●	—	■

\* ○: Basic size ●: With reducer

\* ○: Basic size ●: With reducer




Note) Select the fitting after confirming the IN / OUT side fitting size and fitting type.

### LQ3 fittings

**LQ3E 4A - S**

Fitting type

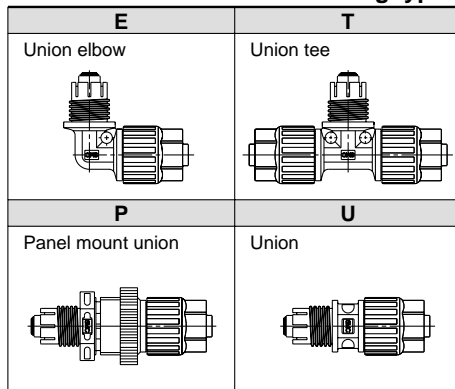

Nut, 1 location removed

Applicable tubing size

Class	Symbol	Applicable tubing size (inch)	Applicable process pump	
			PAF341□S	PAF541□S
4	A	1/2" x 3/8"	■	—
5	A	3/4" x 5/8"	—	■



Note) Select the fitting after confirming the IN / OUT side fitting size and fitting type.

### Ordering Example

**PAF3410S-1S13-B**  
Process pump

Tubing size 12 x 10

OUT side

**LQ1E41-S**  
Union elbow

**LQ1U4B-S**  
Union

IN side

Tubing size 3/8" x 1/4"

<b>PAF3410S-1S13-B</b>	1
<b>LQ1E41-S</b> (Union elbow)	1
<b>LQ1U4B-S</b> (Union)	1

Note) Fittings which are ordered with the process pump at the same time will be shipped in a separate package.

**PA**

**PAP**

**PAX**

**PB**


**PAF**

PA   
PB


# Series PAF

## Performance Curve: Automatically Operated Type


**PAF3410 Flow Characteristics**

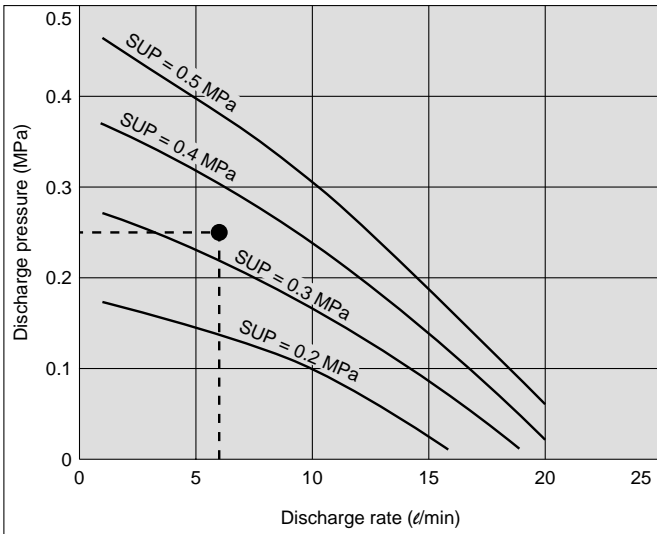


**PAF5410 Flow Characteristics**

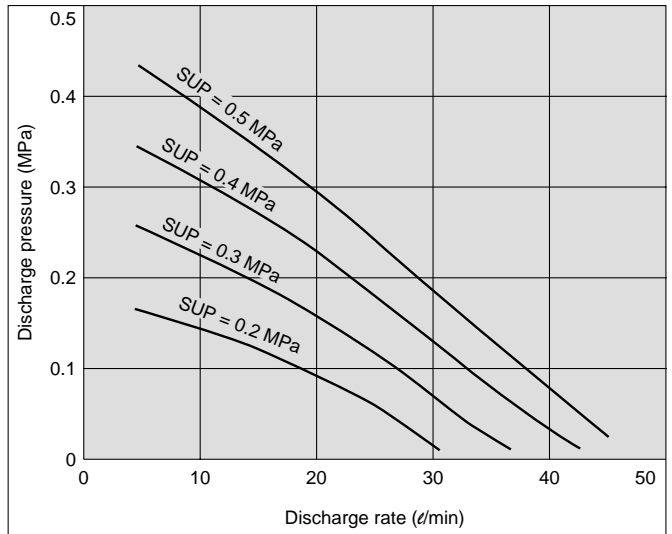

**PAF3410 Air Consumption**

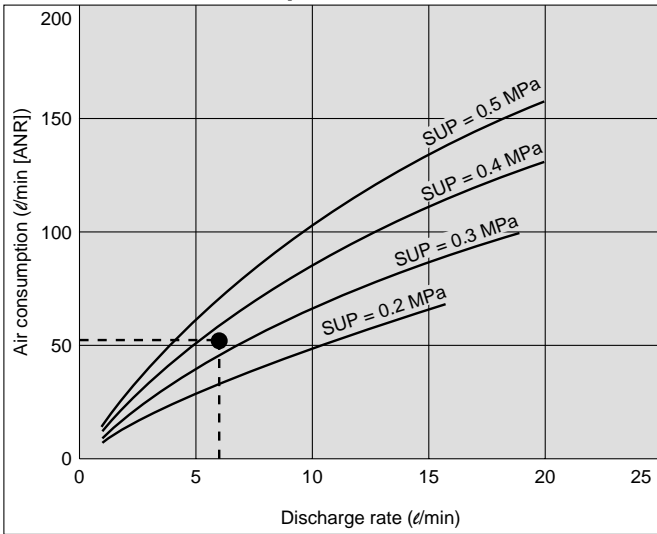

**PAF5410 Air Consumption**

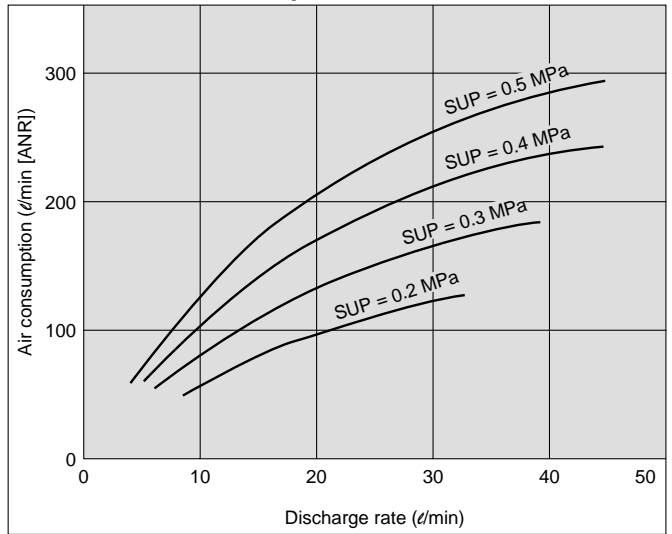

### Selection from Flow Characteristic Graph (PAF3410)

Required specifications example:

Find the pilot air pressure and pilot air consumption for a discharge rate of 6 ℓ/min and discharge pressure of 0.25 MPa. <The transfer fluid is fresh water (viscosity 1 mPa·s, specific gravity 1.0).>

\* If the total lifting height is required instead of the discharge pressure, discharge pressure of 0.1 MPa corresponds to a total lift of 10 m.


Selection procedures:

1. First mark the intersection point for a discharge rate of 6 ℓ/min and discharge pressure of 0.25 MPa.
2. Find the pilot air pressure for the marked point. In this case, the point is between the discharge curves for SUP = 0.3 MPa and SUP = 0.4 MPa, and based on the proportional relationship to these lines, the pilot air pressure for this point is approximately 0.35 MPa.
3. Next find the air consumption rate. Trace the discharge rate, 6 ℓ/min, up to the point between the discharge curves for SUP = 0.3 MPa and 0.4 MPa, then trace to the Y-axis, finding the air consumption to be around 55 ℓ/min (ANR).

### ⚠ Caution

1. These flow characteristics are for fresh water (viscosity 1 mPa·s, specific gravity 1.0).
2. The discharge rate differs greatly depending on properties (viscosity, specific gravity) of the fluid being transferred and operating conditions (lifting range, transfer distance), etc.
3. Use 0.75 kW per 100 ℓ/min of air consumption as a guide for the relationship of the air consumption to the compressor.

### Viscosity Characteristics (Flow rate correction for viscous fluids)

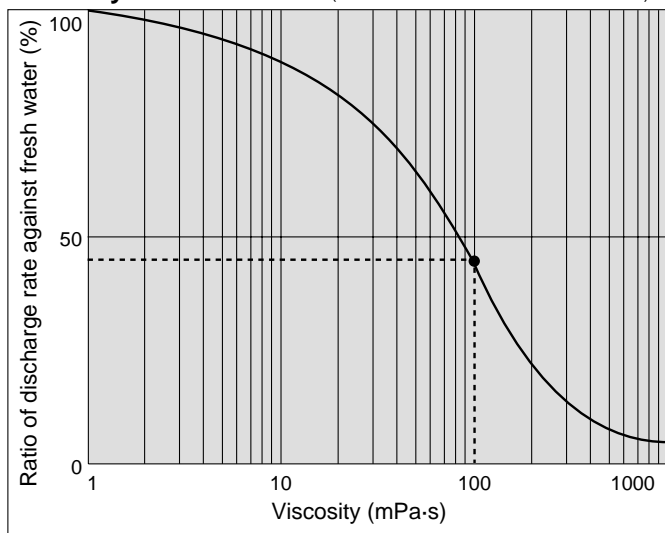

### Selection from Viscosity Characteristic Graph

Required specifications example:

Find the pilot air pressure and pilot air consumption for a discharge rate of 2.7 ℓ/min, discharge pressure of 0.25 MPa, and a viscosity of 100 mPa·s.

Selection procedures:

1. First find the ratio of the discharge rate for fresh water when viscosity is 100 mPa·s from the graph below. It is determined to be 45%.
2. Next, in the required specification example, the viscosity is 100 mPa·s and the discharge rate is 2.7 ℓ/min. Since this is equivalent to 45% of the discharge rate for fresh water,  $2.7 \text{ ℓ/min} \div 0.45 = 6 \text{ ℓ/min}$ , indicating that a discharge rate of 6 ℓ/min is required for fresh water.
3. Finally, find the pilot air pressure and pilot air consumption based on selection from the flow characteristic graphs.

### ⚠ Caution

Viscosities up to 1000 mPa·s can be used.

Dynamic viscosity  $v = \text{Viscosity } \mu / \text{Density } \rho$ .

$$v = \frac{\mu}{\rho}$$

$$v(10^{-3} \text{ m}^2/\text{s}) = \mu(\text{mPa}\cdot\text{s}) / \rho(\text{kg}/\text{m}^3)$$

PA

PAP

PAX

PB

PAF

PA□


PB




# Series PAF

## Performance Curve: Air Operated Type


### PAF3413 Flow Characteristics

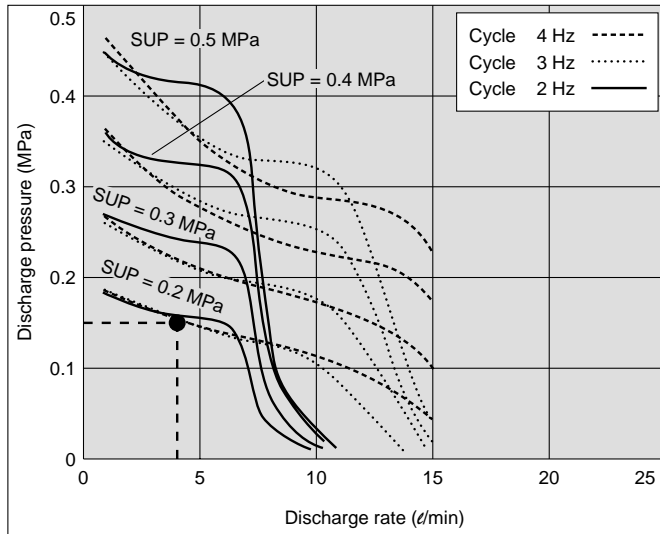


### PAF5413 Flow Characteristics

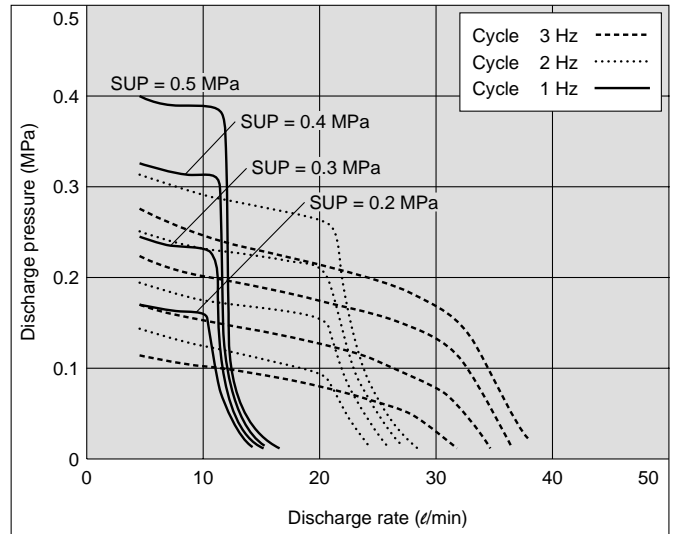


### PAF3413 Air Consumption (4 Hz)

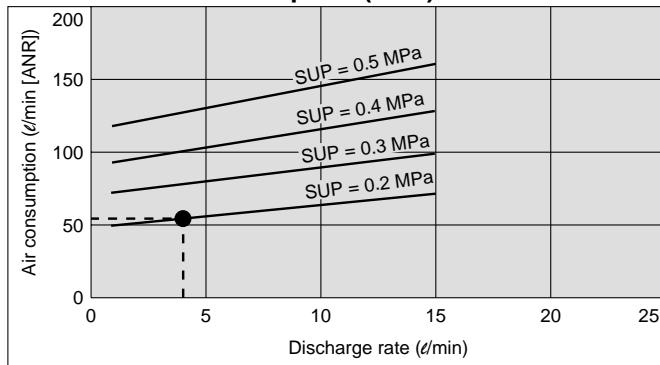


### PAF5413 Air Consumption (3 Hz)

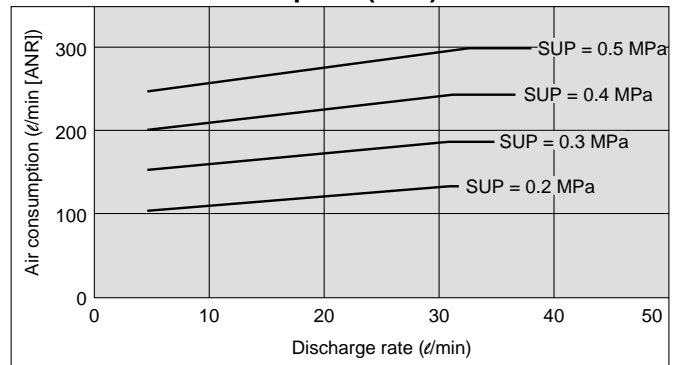


### PAF3413 Air Consumption (3 Hz)

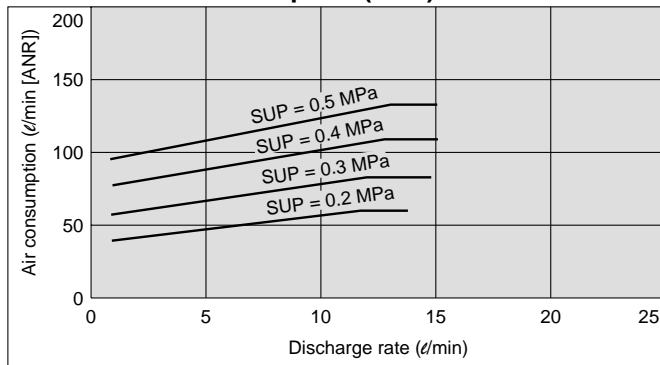


### PAF5413 Air Consumption (2 Hz)

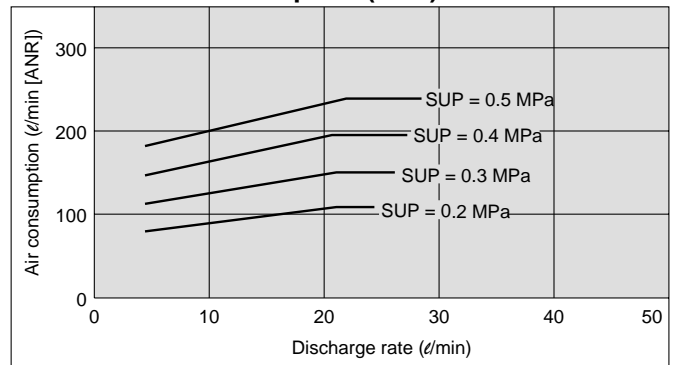

### PAF3413 Air Consumption (2 Hz)

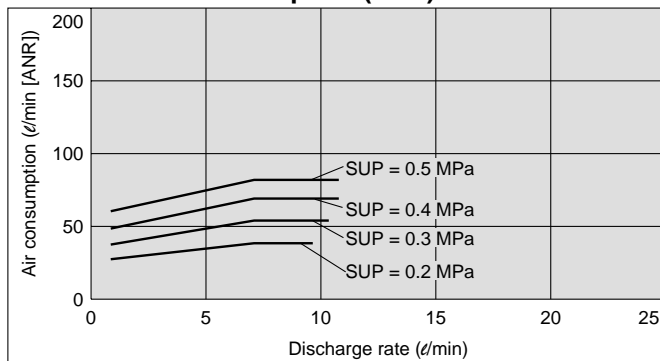

### PAF5413 Air Consumption (1 Hz)

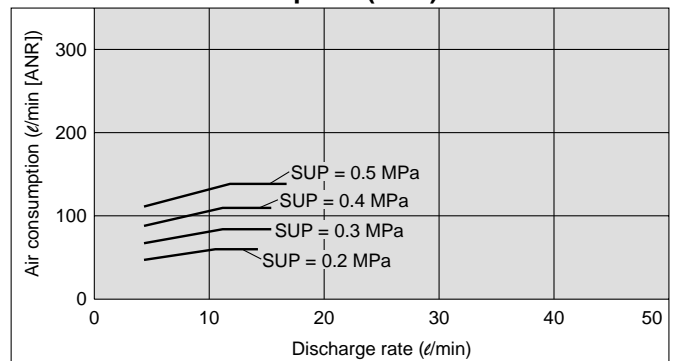

### Selection from Flow Characteristic Graph (PAF3413)

Required specification example:

Find the pilot air pressure and pilot air consumption for a discharge rate of 4 ℓ/min and discharge pressure of 0.15 MPa. <The transfer fluid is fresh water (viscosity 1 mPa-s, specific gravity 1.0).>

Note 1) If the total lifting height is required instead of the discharge pressure, discharge pressure of 0.1 MPa corresponds to a total lift of 10 m.

Note 2) Discharge per cycle: Approx. 50 ml

Selection procedures:

1. First mark the intersection point for a discharge rate of 4 ℓ/min and discharge pressure of 0.15 MPa.
2. Find the pilot air pressure for the marked point. In this case, the point is between the discharge curves (solid lines) for SUP = 0.2 MPa, and the pilot air pressure for this point is approx. 0.2 MPa.

### Calculating Air Consumption (PAF3413)

Find the air consumption for operation with a discharge rate of 4 ℓ/min, a 4 Hz switching cycle and pilot air pressure of 0.2 MPa from the air consumption graph.


Selection procedures:

1. Look up from the discharge rate of 4 ℓ/min to find the intersection with SUP = 0.2 MPa.
2. From the point just found, draw a line to the Y-axis to find the air consumption. The result is approximately 54 ℓ/min (ANR).

### ⚠ Caution

1. These flow characteristics are for fresh water (viscosity 1 mPa-s, specific gravity 1.0).
2. The discharge rate differs greatly depending on properties (viscosity, specific gravity) of the fluid being transferred and operating conditions (density, lifting range, transfer distance).

### Viscosity Characteristics (Flow rate correction for viscous fluids)

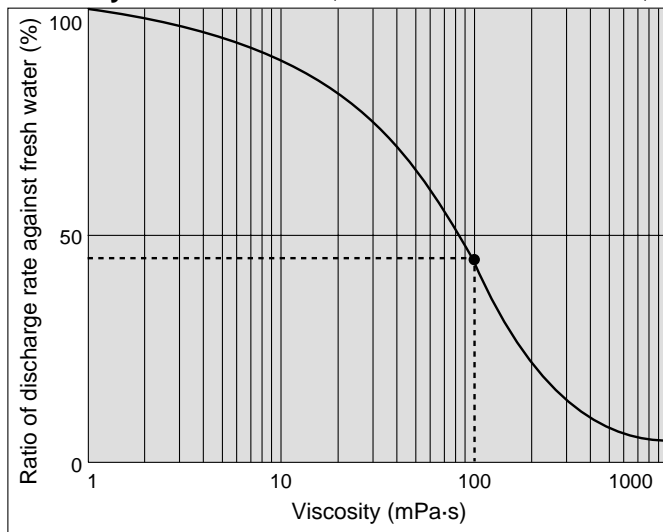

### Selection from Viscosity Characteristic Graph

Required specification example:

Find the pilot air pressure and pilot air consumption for a discharge rate of 2.7 ℓ/min, discharge pressure of 0.25 MPa, and a viscosity of 100 mPa-s.

Selection procedures:

1. First find the ratio of the discharge rate for fresh water when viscosity is 100 mPa-s from the graph below. It is determined to be 45%.
2. Next, in the required specification example, the viscosity is 100 mPa-s and the discharge rate is 2.7 ℓ/min. Since this is equivalent to 45% of the discharge rate for fresh water,  $2.7 \text{ ℓ/min} \div 0.45 = 6 \text{ ℓ/min}$ , indicating that a discharge rate of 6 ℓ/min is required for fresh water.
3. Finally, find the pilot air pressure based on selection from the flow characteristic graphs.

### ⚠ Caution

Viscosities up to 1000 mPa-s can be used.

Dynamic viscosity  $\nu$  = Viscosity  $\mu$  / Density  $\rho$ .

$$\nu = \frac{\mu}{\rho}$$

$$\nu(10^{-3} \text{ m}^2/\text{s}) = \mu(\text{mPa-s})/\rho(\text{kg/m}^3)$$

PA  
PAP  
PAX  
PB  
PAF  
PA  
PB

# Series PAF

## Specifications

### Series PAF3000

Model		PAF3410	PAF3413
Operation method		Automatically operated	Air operated
Port size	Main fluid: Suction/Discharge port	Rc, NPT, G 3/8" Female thread, 1/2" Tube extension, With nut (size 4, 5)	
	Pilot air: Supply/Exhaust port	Rc, NPT, G 1/4" Female thread	Rc, NPT, G 1/8" Female thread
Discharge flow rate		1 to 20 ℓ/min	1 to 15 ℓ/min
Average discharge pressure		0 to 0.4 MPa	
Pilot air pressure		0.2 to 0.5 MPa (for 0 to 60°C)	
Air consumption		230 ℓ/min (ANR) or less	
Suction lift	Dry	Up to 1 m (inside the pump is dry)	
	Wet	Up to 4 m (with fluid inside the pump)	
Noise		80 dB (A) or less (Option: with silencer, AN200)	80 dB (A) or less (excluding the noise from the quick exhaust and solenoid valve)
Withstand pressure		0.75 MPa	
Service life		50 million cycles (for water)	
Operating fluid temperature		0 to 90°C (No freezing)	
Ambient temperature		0 to 70°C (No freezing)	
Recommended operation cycle		—	2 to 4 Hz
Mass (without foot bracket)		1.6 kg	1.3 kg
Mounting		Horizontal (mounting on the bottom surface)	
Packaging		Clean double packaging	

Note) Values in the table are measured at room temperature using fresh water.

### Series PAF5000

Model		PAF5410	PAF5413
Operation method		Automatically operated	Air operated
Port size	Main fluid: Suction/Discharge port	Rc, NPT, G 3/4" Female thread, 3/4" Tube extension, With nut (size 5, 6)	
	Pilot air: Supply/Exhaust port	Rc, NPT, G 1/4" Female thread	
Discharge flow rate		5 to 45 ℓ/min	5 to 38 ℓ/min
Average discharge pressure		0 to 0.4 MPa	
Pilot air pressure		0.2 to 0.5 MPa (for 0 to 60°C)	
Air consumption		300 ℓ/min (ANR) or less	
Suction lift	Dry	Up to 1 m (inside the pump is dry)	
	Wet	Up to 4 m (with fluid inside the pump)	
Noise		80 dB (A) or less (Option: with silencer, AN200)	80 dB (A) or less (excluding the noise from the quick exhaust and solenoid valve)
Withstand pressure		0.75 MPa	
Service life		50 million cycles (for water)	
Operating fluid temperature		0 to 90°C (No freezing)	
Ambient temperature		0 to 70°C (No freezing)	
Recommended operation cycle		—	1 to 3 Hz
Mass (without foot bracket)		6 kg	
Mounting		Horizontal (mounting on the bottom surface)	
Packaging		Clean double packaging	


Note) Values in the table are measured at room temperature using fresh water.

### Tube Size Applicable for Nut Size

(Tube size can be altered, using a reducer even within the same nut size.)

Size	Applicable tubing size
4	10 x 8, 12 x 10, 3/8" x 1/4", 1/2" x 3/8"
5	12 x 10, 19 x 16, 1/2" x 3/8", 3/4" x 5/8"
6	19 x 16, 25 x 22, 3/4" x 5/8", 1" x 7/8"

### Working Principle: Automatically Operated Type (PAF3410, 5410)

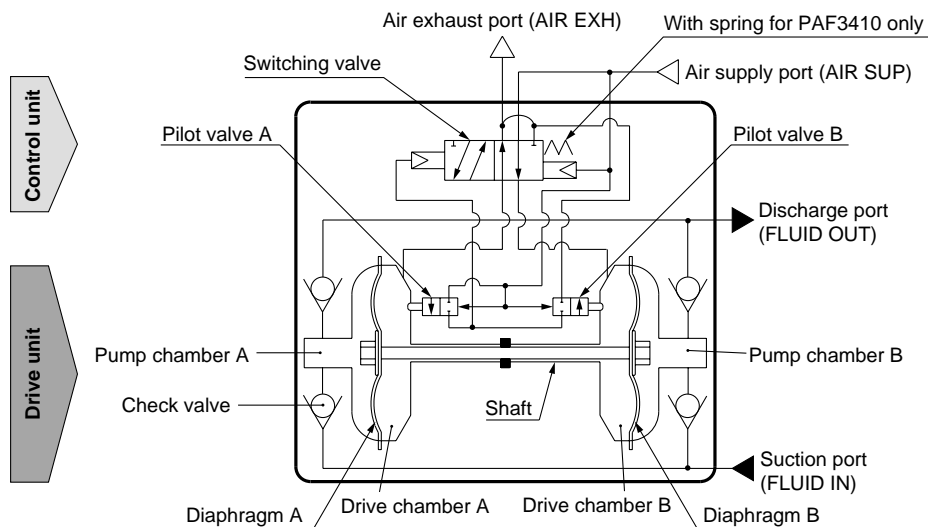

#### Control unit

1. When air is supplied, it passes through the switching valve and enters drive chamber B.
2. Diaphragm B moves to the right, and at the same time diaphragm A also moves to the right pushing pilot valve A.
3. When pilot valve A is pushed, air acts upon the switching valve, drive chamber A switches to a supply state, and the air which was in drive chamber B is exhausted to the outside.
4. When air enters drive chamber A, diaphragm B moves to the left pushing pilot valve B.
5. When pilot valve B is pushed, the air which was acting upon the switching valve is exhausted, and drive chamber B once again switches to a supply state. A continuous reciprocal motion is generated by this repetition.

#### Drive unit

1. When air enters drive chamber B, the fluid in pump chamber B is forced out, and at the same time fluid is sucked into pump chamber A.
2. When the diaphragm moves in the opposite direction, the fluid in pump chamber A is forced out, and fluid is sucked into pump chamber B.
3. Continuous suction and discharge is performed by the reciprocal motion of the diaphragm.

PA

PAP

PAX


PB

PAF

PA□

PB

### Working Principle: Air Operated Type (PAF3413, 5413)

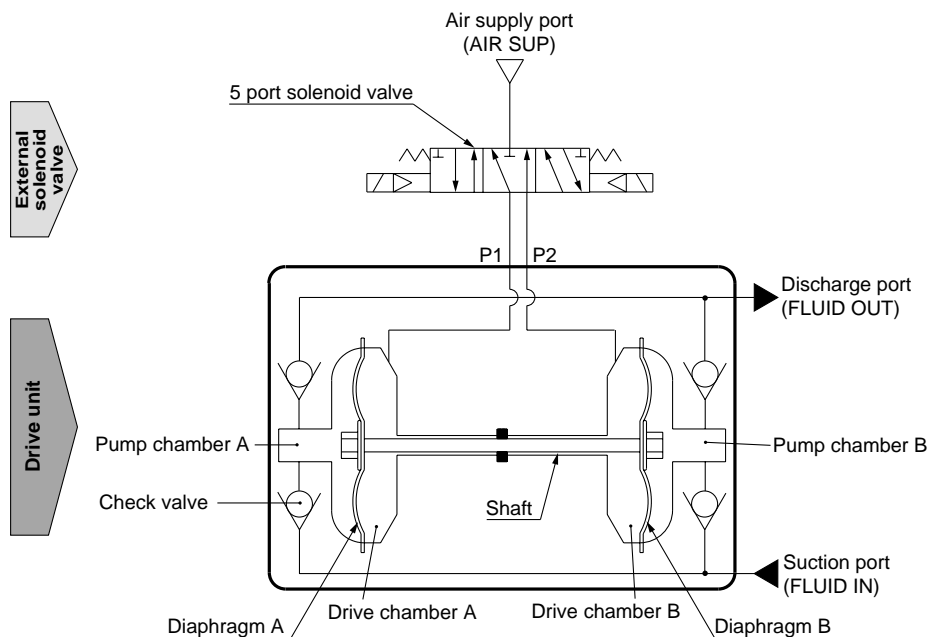


1. When air is supplied to P1 port, it enters drive chamber A.
2. Diaphragm A moves to the left, and at the same time diaphragm B also moves to the left.
3. The fluid in pump chamber A is forced out to the discharge port, and the fluid is sucked into pump chamber B from the suction port.
4. If air is supplied to the P2 port, the opposite will occur. Continuous suction and discharge of fluid is performed by repeating this process with the control of an external solenoid valve (5 port valve).

# Series PAF

## Piping and Operation: Automatically Operated Type (PAF3410, 5410)

### Piping diagram

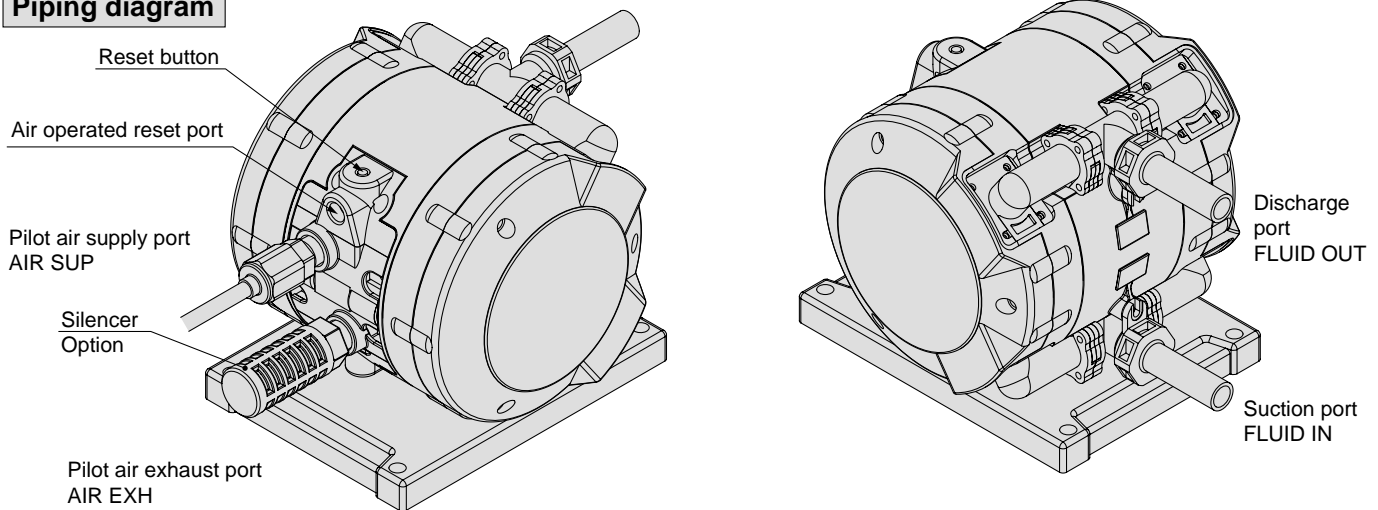

### Caution

Mounting posture of the pump is set with the mounting bracket facing downward. Air to be supplied to the air supply port <AIR SUP> should be cleaned and filtered through a filter, or a mist separator etc. Air with foreign matter or drainage etc. will have negative effects on the built-in solenoid valve and will lead to malfunction. Maintain the proper tightening torque for fittings and mounting bolts, etc. Looseness can cause problems such as fluid and air leaks, while over tightening can cause damage to threads and parts, etc.

### Operation

<Starting and Stopping> Refer to circuit example (1)

1. Connect air piping to the air supply port <AIR SUP> and connect piping for the fluid to be transferred to the suction port <FLUID IN> and the discharge port <FLUID OUT>.
2. Using a regulator, set the pilot air pressure within the range of 0.2 to 0.5 MPa. Then, the pump operates when power is applied to the 3 port solenoid valve of the air supply port <AIR SUP>, the sound of exhaust begins from the air exhaust port <AIR EXH> and fluid flows from the suction port <FLUID IN> to the discharge port <FLUID OUT>. At this time, the ball valve on the discharge side is in an open state. The pump performs suction with its own power even without priming. (Dry state suction lifting range: max. 1 m) To restrict exhaust noise, attach a silencer (AN200-02: option) to the air exhaust port <AIR EXH>.
3. To stop the pump, exhaust the air pressure being supplied to the pump by the 3 port solenoid valve of the air supply port <AIR SUP>. The pump stops even when the ball valve on the discharge side is closed. But the pressure supply to the pump should be exhausted quickly.

<Discharge Flow Rate Adjustment>

1. Adjustment of the flow rate from the discharge port <FLUID OUT> is performed with the ball valve connected on the discharge side or the throttle connected on the air exhaust side. For adjustment from the air side, use of the silencer with throttle ASN2 (port size 1/4) or the needle valve connected to the air exhaust port <AIR EXH> is effective. Refer to circuit example (1).
2. When operating with a discharge flow rate below the specification range, provide a by-pass circuit from the discharge side to the suction side to ensure the minimum flow rate inside the process pump. With a discharge flow rate below the minimum flow rate, the process pump may stop due to unstable operation. Refer to circuit example (2). (Minimum flow rates: PAF3000 1 l/min, PAF5000 5 l/min)

<Reset Button>

When the pump stops during operation, press the reset button. This makes it possible to restore operation in case the switching valve becomes clogged due to foreign matter in the supply air.


<Air Operated Reset Port>

It is possible to restore operation by supplying air to the air operated reset port without directly pressing the reset button, such as by remote control. Pressure equivalent to or greater than pilot air pressure (but less than 0.5 MPa) is required to reset air. Refer to air operated reset circuit example (1) and (2).


<Counting The Operating Cycle: PAF3000 Only>

The pump's operating cycle can be counted by applying a pressure switch to the air operated reset port. Keep the distance between the pressure switch and the air operated reset port within 50 mm. Refer to air operated reset circuit example (1).

### Circuit example (1)

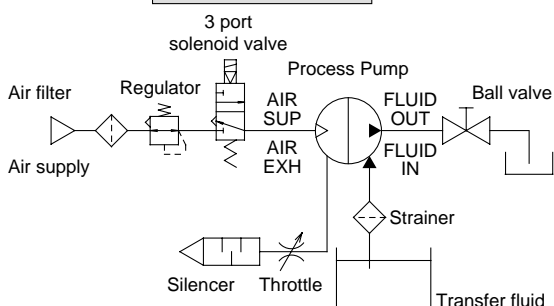


### Circuit example (2)

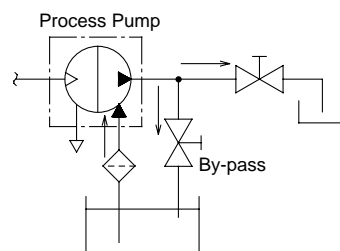


### Air operated reset

#### Circuit example (1) [PAF3000]

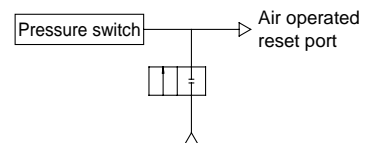


#### Circuit example (2) [PAF5000]



For the related products, refer to page 728 and 729.

## Piping and Operation: Air Operated Type (PAF3413, 5413)

### Piping diagram

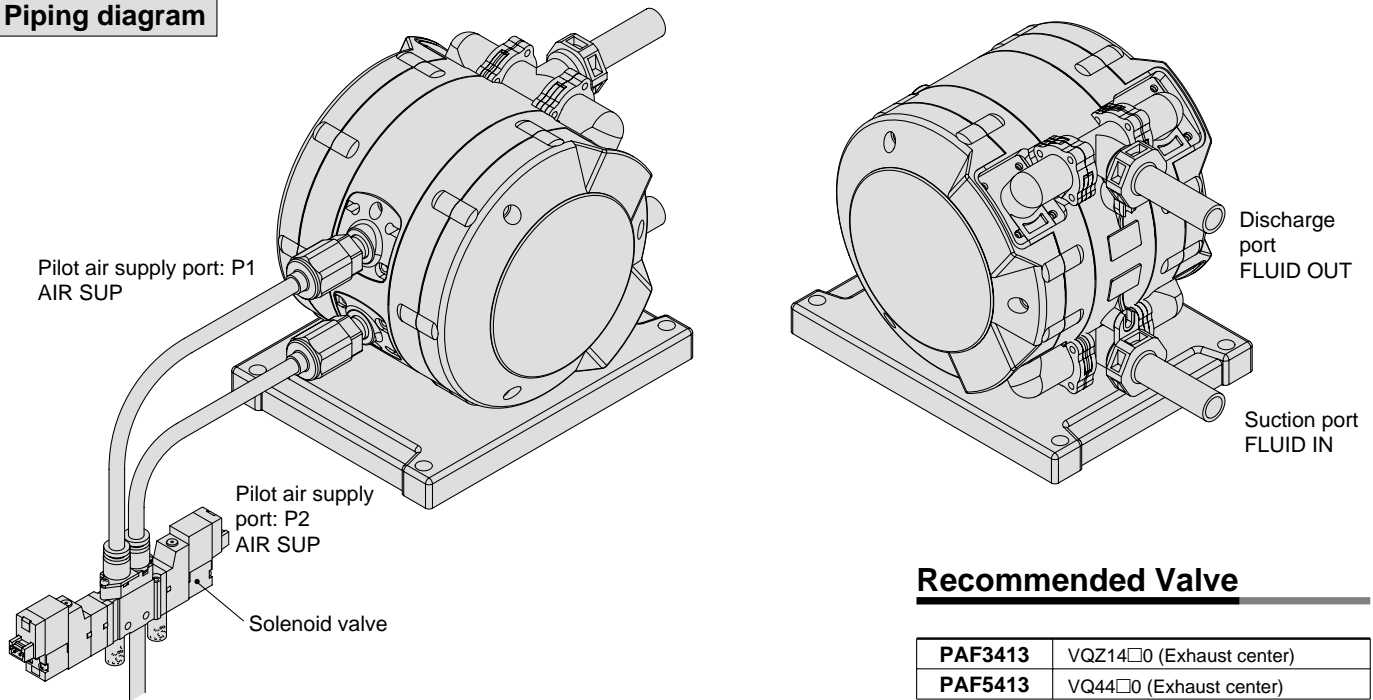

### Recommended Valve

<b>PAF3413</b>	VQZ14□□0 (Exhaust center)
<b>PAF5413</b>	VQ44□□0 (Exhaust center)

Refer to page 728 for further details.

### Caution

Maintain the proper tightening torque for fittings and mounting bolts, etc. Looseness can cause problems such as fluid and air leaks, while over tightening can cause damage to threads and parts, etc.

### Operation

<Starting and Stopping> Refer to circuit example

1. Connect air piping <sup>Note 1)</sup> to the pilot air supply port <P1>, <P2> and connect piping for the fluid to be transferred to the suction port <FLUID IN> and the discharge port <FLUID OUT>.
2. Using a regulator, set the pilot air pressure within the range of 0.2 to 0.5 MPa. Then, the pump operates when power is applied to the solenoid valve <sup>Note 2)</sup> of the pilot air supply port and fluid flows from the suction port <FLUID IN> to the discharge port <FLUID OUT>. At this time, the ball valve on the discharge side is in an open state. The pump performs suction with its own power even without priming. <sup>Note 3)</sup> (Dry state suction lifting range: Max. 1 m) To restrict exhaust noise, attach a silencer to the solenoid valve air exhaust port.
3. To stop the pump, exhaust the air pressure being supplied to the pump with the solenoid valve of the air supply port.

Note 1) When used for highly permeable fluids, the solenoid valve may malfunction due to the gas contained in the exhaust. Implement measures to keep the exhaust from going to the solenoid valve side.


Note 2) For the solenoid valve, use an exhaust center 5 port valve, or a combination of residual exhaust 3 port valve and a pump drive 4 port valve. If air in the drive chamber is not released when the pump is stopped, the diaphragm will be subjected to pressure and its life will be shortened.

Note 3) When the pump is dry, operate the solenoid valve at a switching cycle of 2 to 4 Hz for PAF3000, 1 to 3 Hz for PAF5000. If operated outside of this range, the suction lifting height may not reach the prescribed value.


<Discharge Flow Rate Adjustment>

1. The flow rate from the discharge port <FLUID OUT> can be adjusted easily by changing the switching cycle of the solenoid valve on the air supply port.

#### Circuit example (1)

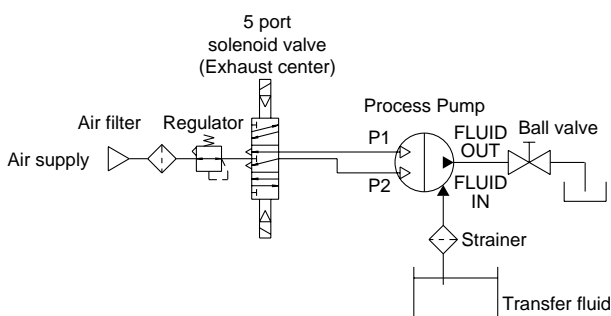

#### Circuit example (2)

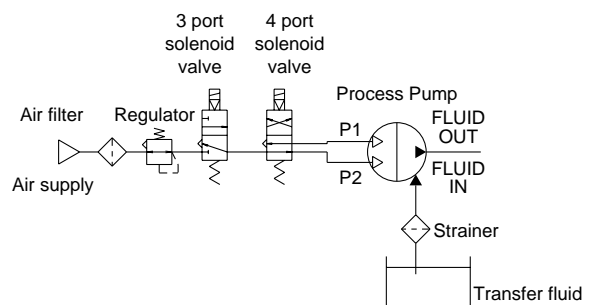


For the related products, refer to page 728 and 729.


# Series PAF

## Dimensions: Automatically Operated Type (Series PAF3000)

Female thread: PAF3410-<sup>03</sup>N03-F03

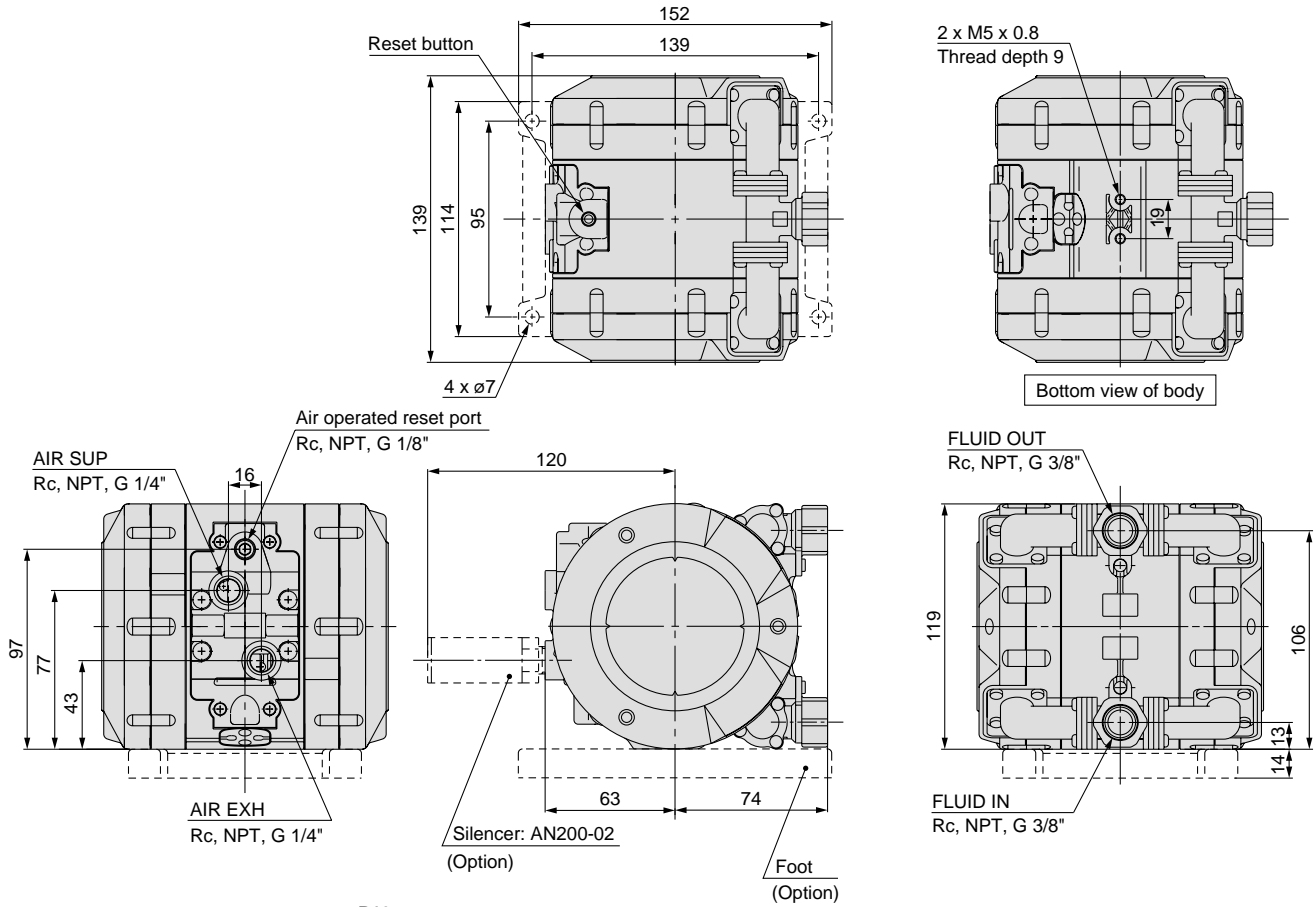


Tube extension: PAF3410-<sup>P13</sup>P13N-P13F

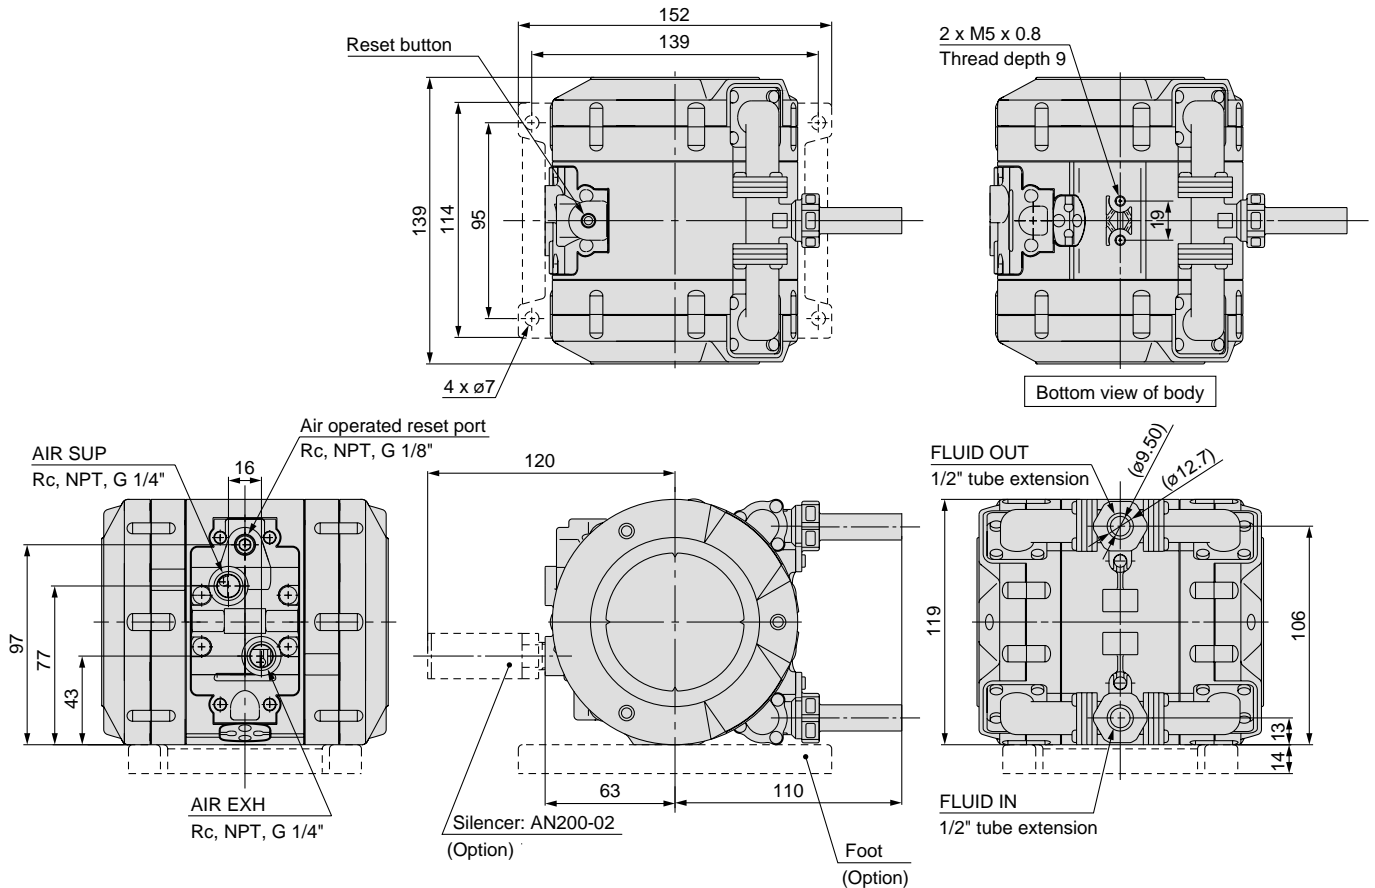

**Dimensions: Automatically Operated Type (Series PAF3000)**

With nut (with LQ1 fittings): PAF3410S-1S13□  
PAF3410S-1S19□

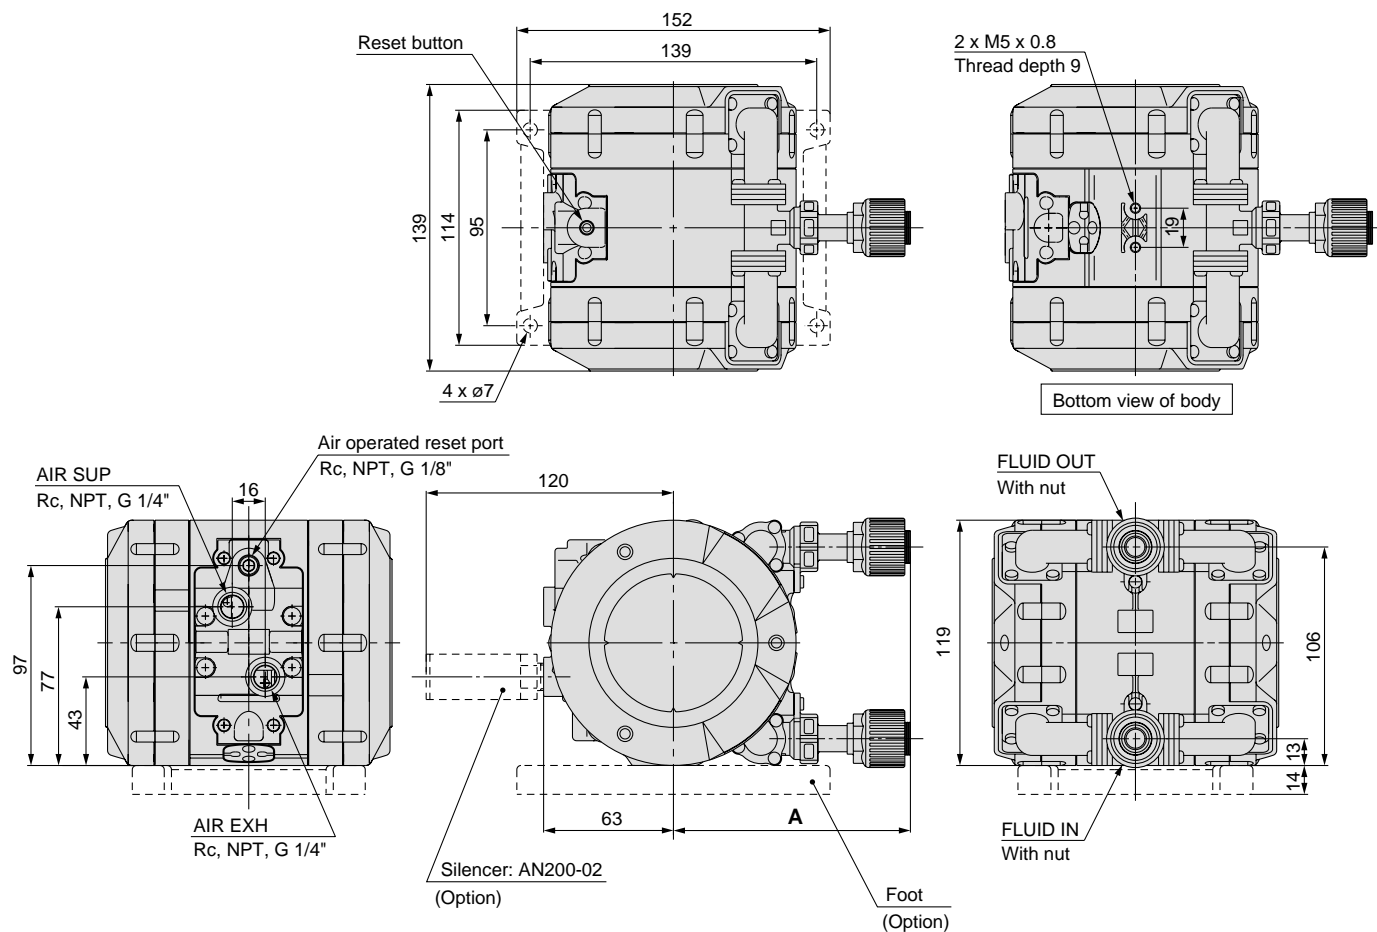


**Tube Size Applicable for Nut Size**

(Tube size can be altered, using a reducer even within the same nut size.)

Model	A (mm)
PAF3410S-1S13□	115
PAF3410S-1S19□	118

Size	Applicable tubing size
4	10 x 8, 12 x 10, 3/8" x 1/4", 1/2" x 3/8"
5	12 x 10, 19 x 16, 1/2" x 3/8", 3/4" x 5/8"

With nut (with LQ3 fittings) : PAF3410S-3S13□

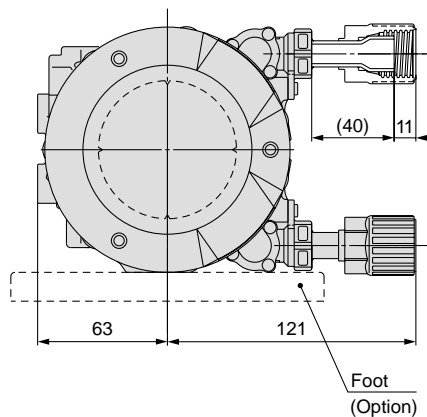



- PA
- PAP
- PAX
- PB
- PAF**
- PA□
- PB






# Series PAF

## Dimensions: Air Operated Type (Series PAF3000)



Female thread: PAF3413-<sup>03</sup>N03  
F03

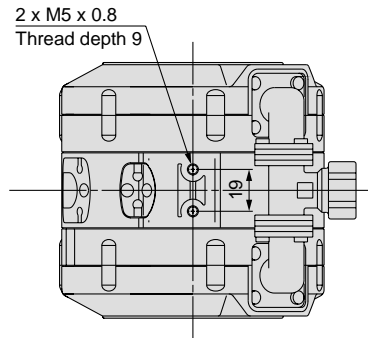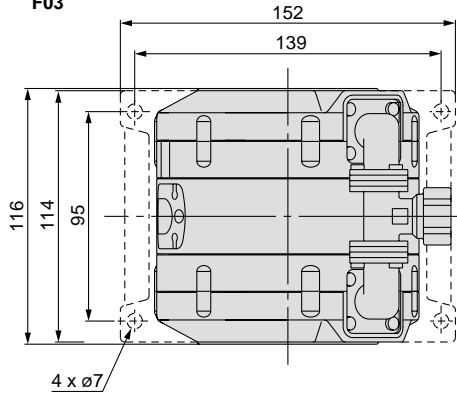




Bottom view of body

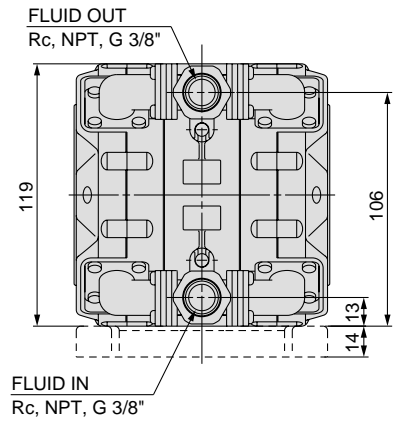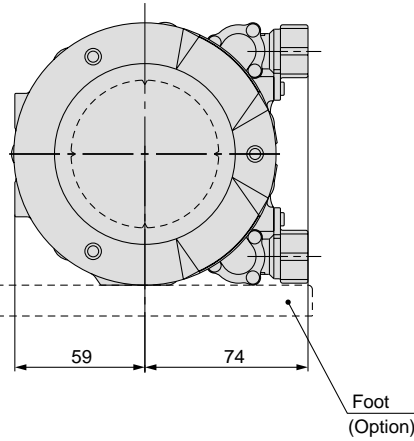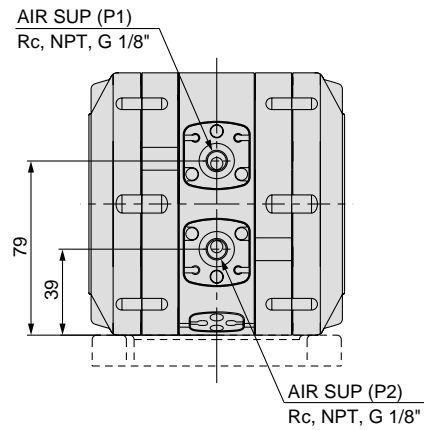

Tube extension: PAF3413-<sup>P13</sup>P13N  
P13F

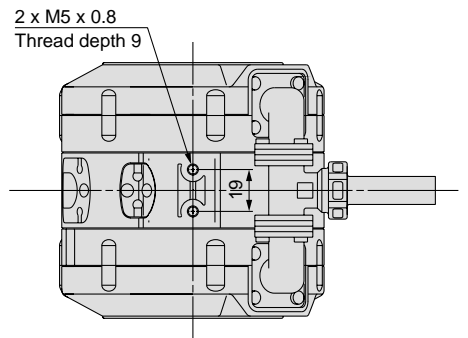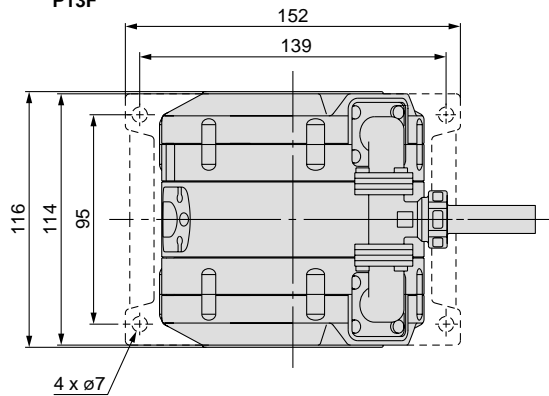


Bottom view of body

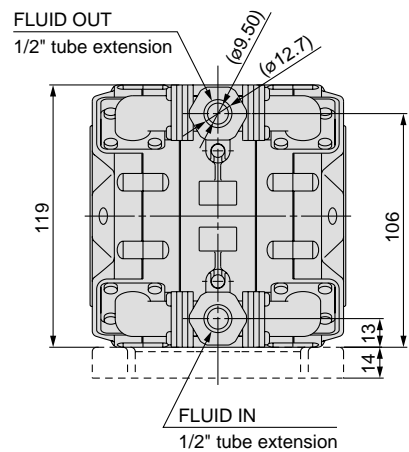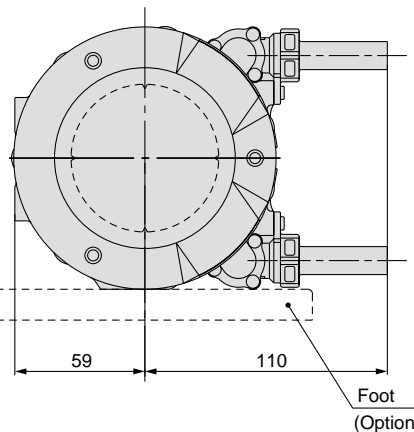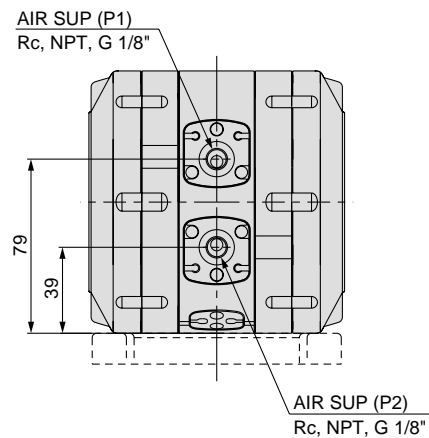

**Dimensions: Air Operated Type (Series PAF3000)**

With nut (with LQ1 fittings): PAF3413S-<sup>1S13</sup><sub>1S19</sub>□

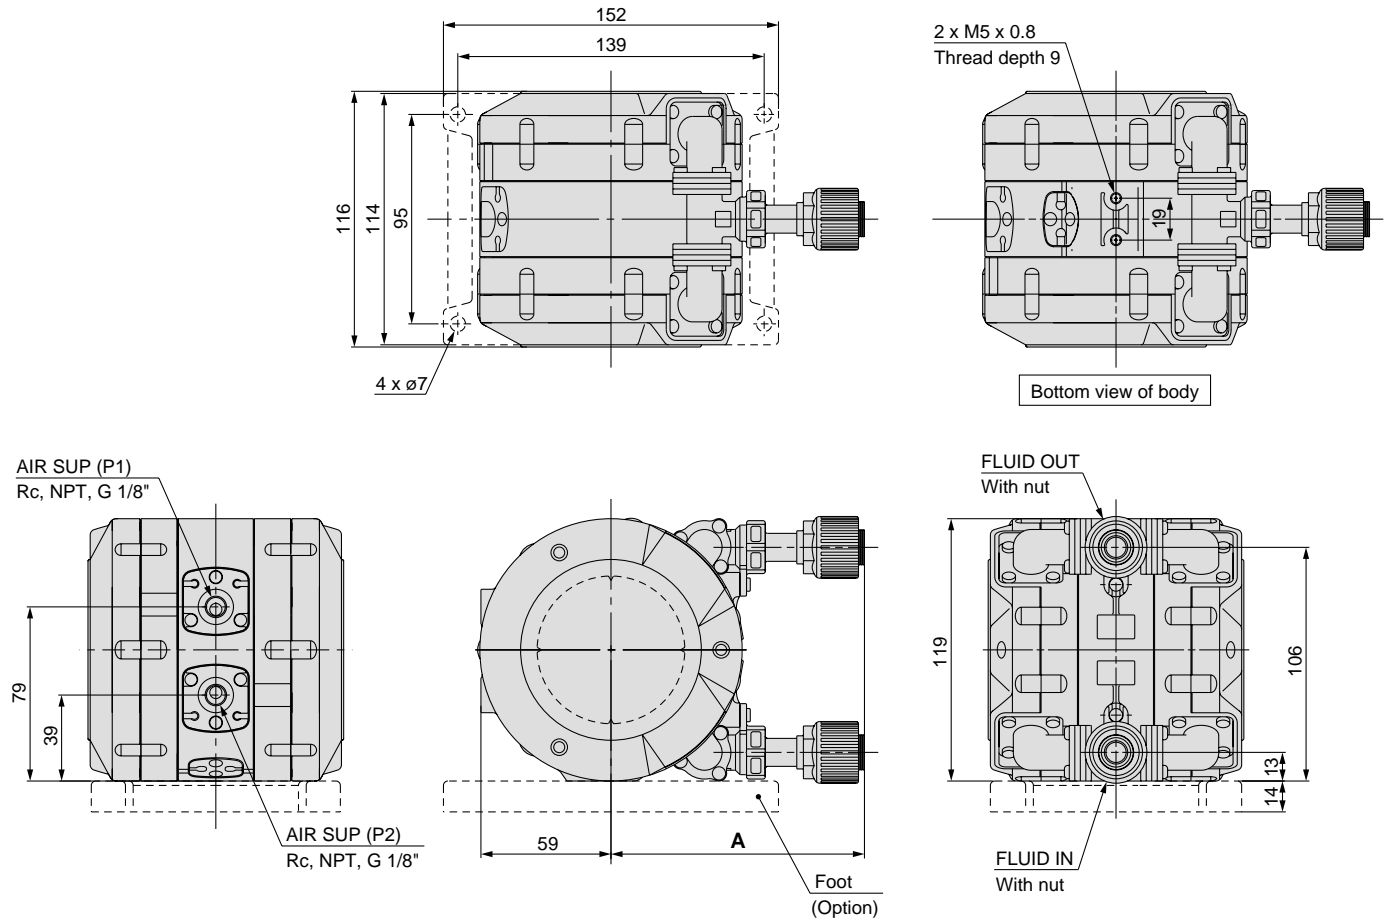


**Tube Size Applicable for Nut Size**

(Tube size can be altered, using a reducer even within the same nut size.)

Model	A (mm)
PAF3413S-1S13□	115
PAF3413S-1S19□	118

Size	Applicable tubing size
4	10 x 8, 12 x 10, 3/8" x 1/4", 1/2" x 3/8"
5	12 x 10, 19 x 16, 1/2" x 3/8", 3/4" x 5/8"

With nut (with LQ3 fittings) : PAF3413S-3S13□

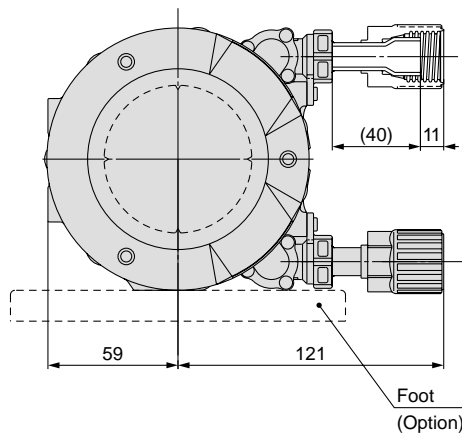


- PA
- PAP
- PAX
- PB
- PAF
- PA□
- PB


# Series PAF

## Dimensions: Automatically Operated Type (Series PAF5000)

Female thread: PAF5410-<sup>06</sup>N06  
F06


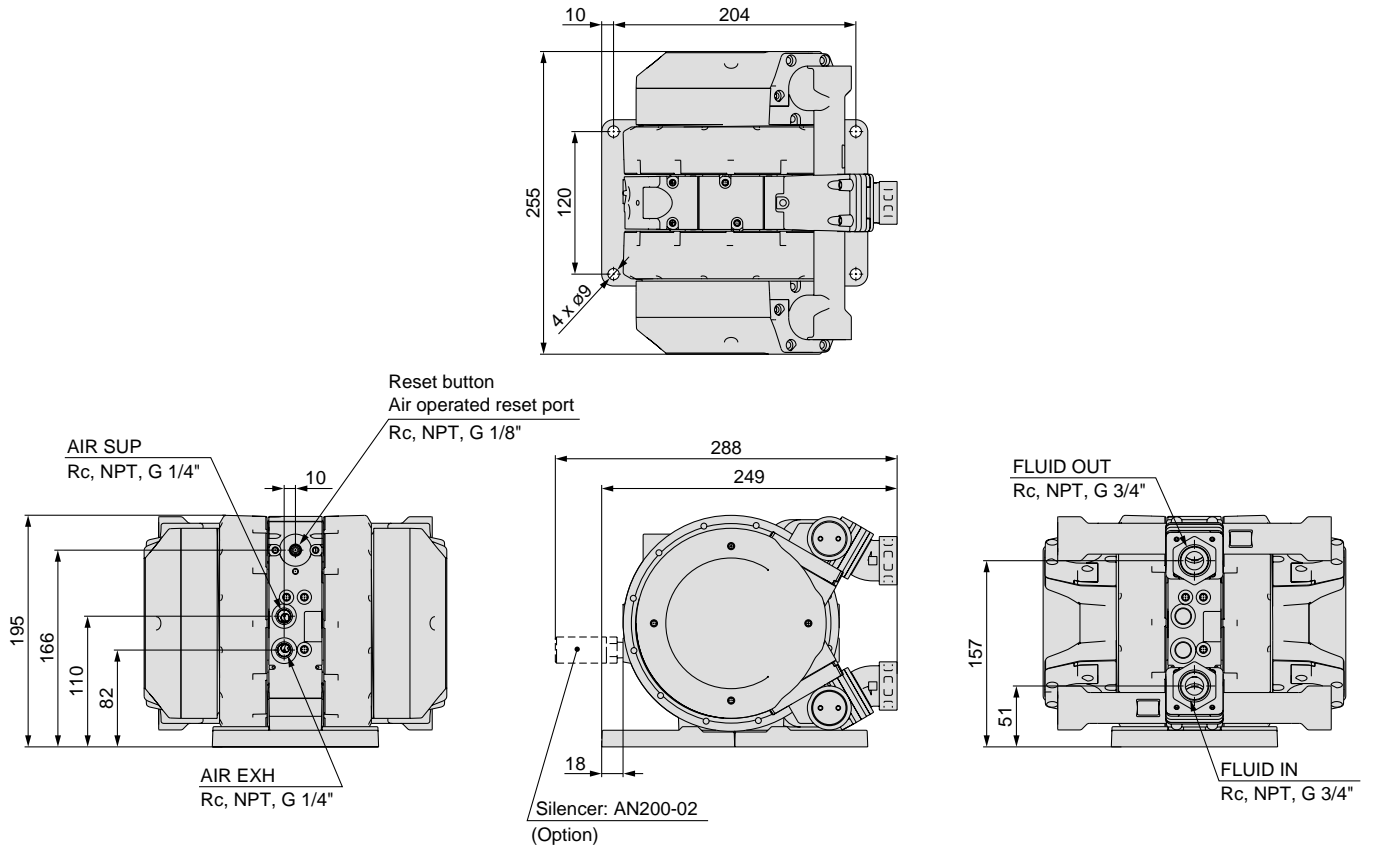


Tube extension: PAF5410-<sup>P19</sup>P19N  
P19F


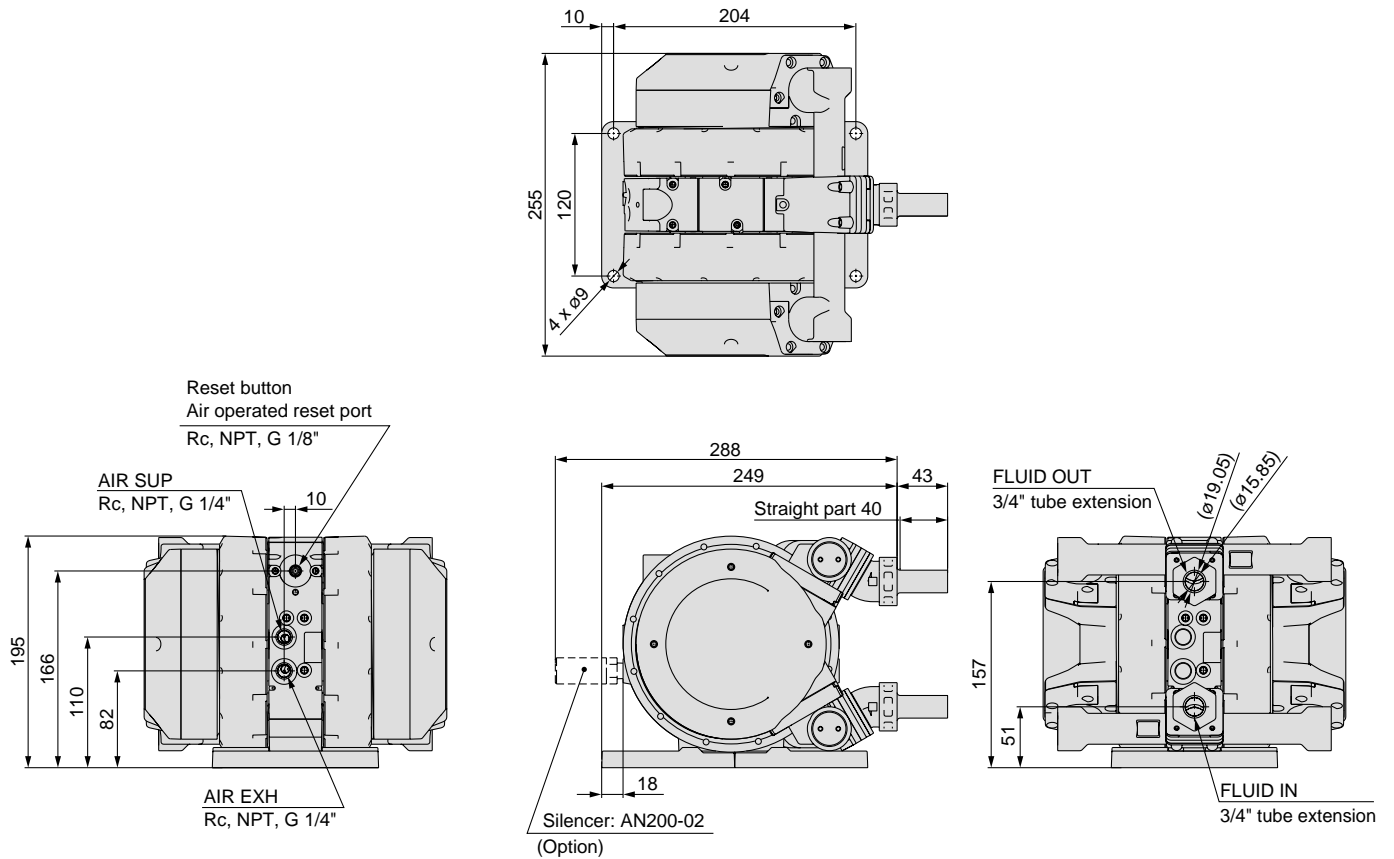


**Dimensions: Automatically Operated Type (Series PAF5000)**

With nut (with LQ1 fittings): PAF5410S-1S19□  
1S25□

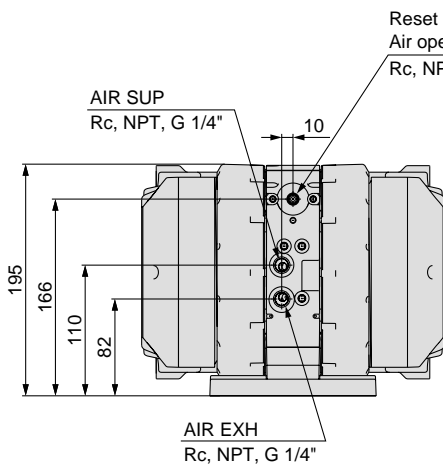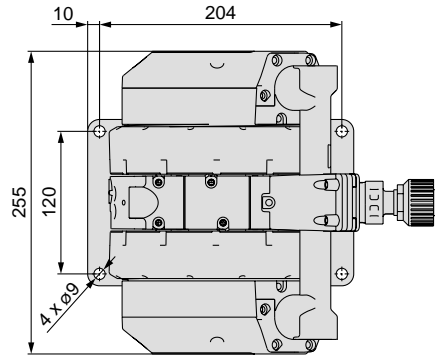

Reset button  
Air operated reset port  
Rc, NPT, G 1/8"

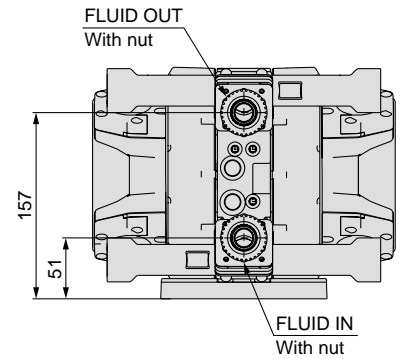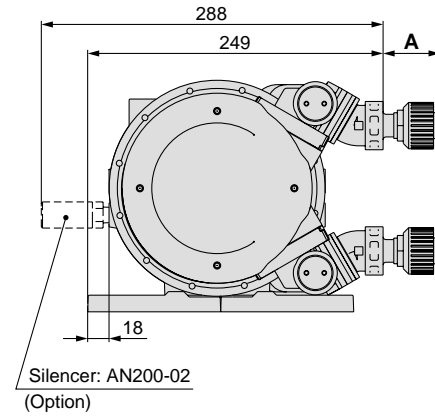

- PA
- PAP
- PAX
- PB
- PAF
- PA□
- PB


**Tube Size Applicable for Nut Size**

(Tube size can be altered, using a reducer even within the same nut size.)

Model	A (mm)
PAF5410S-1S19□	48
PAF5410S-1S25□	55

Size	Applicable tubing size
5	12 x 10, 19 x 16, 1/2" x 3/8", 3/4" x 5/8"
6	19 x 16, 25 x 22, 3/4" x 5/8", 1" x 7/8"


With nut (with LQ3 fittings) : PAF5410S-3S19□

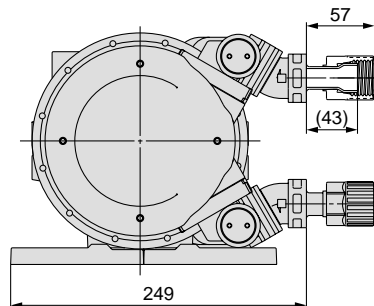


# Series PAF

## Dimensions: Air Operated Type (Series PAF5000)

Female thread: PAF5413-<sup>06</sup>N06  
F06




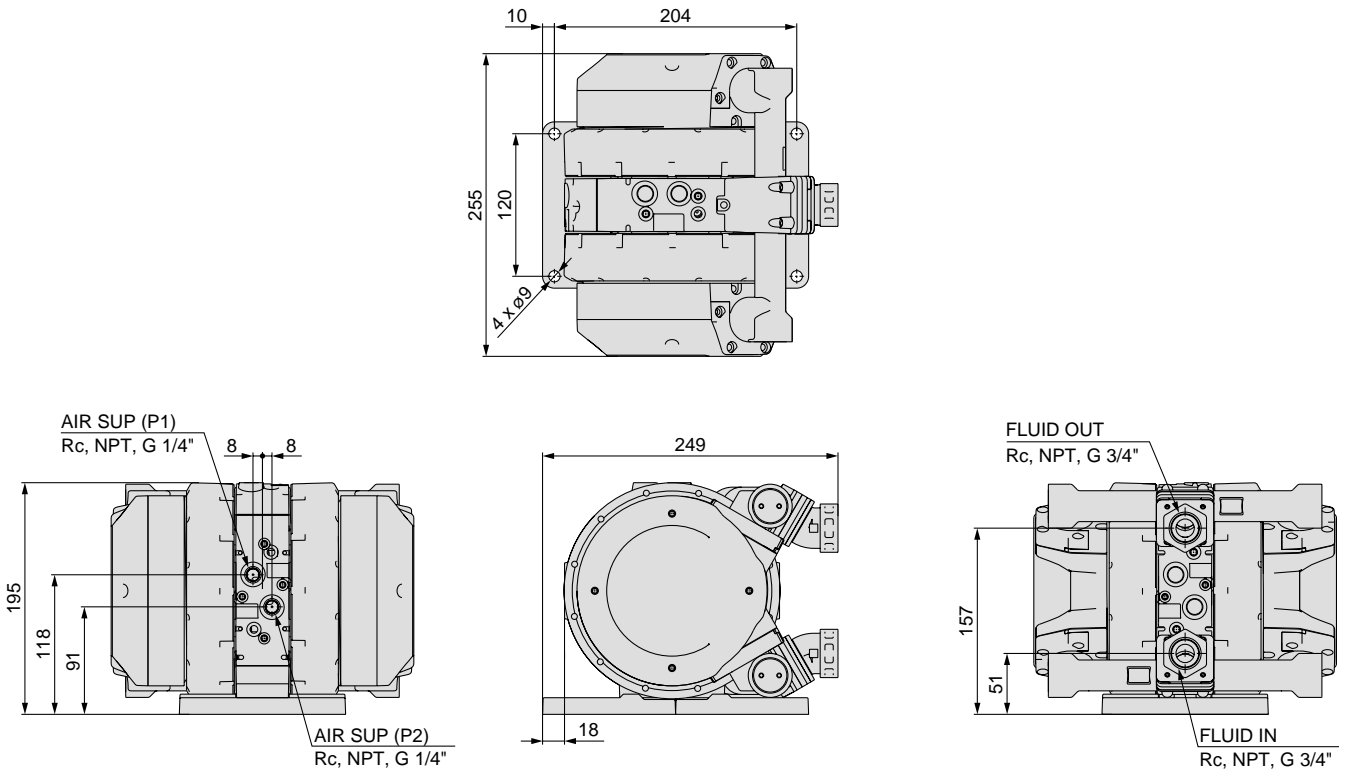


Tube extension: PAF5413-<sup>P19</sup>P19N  
P19F

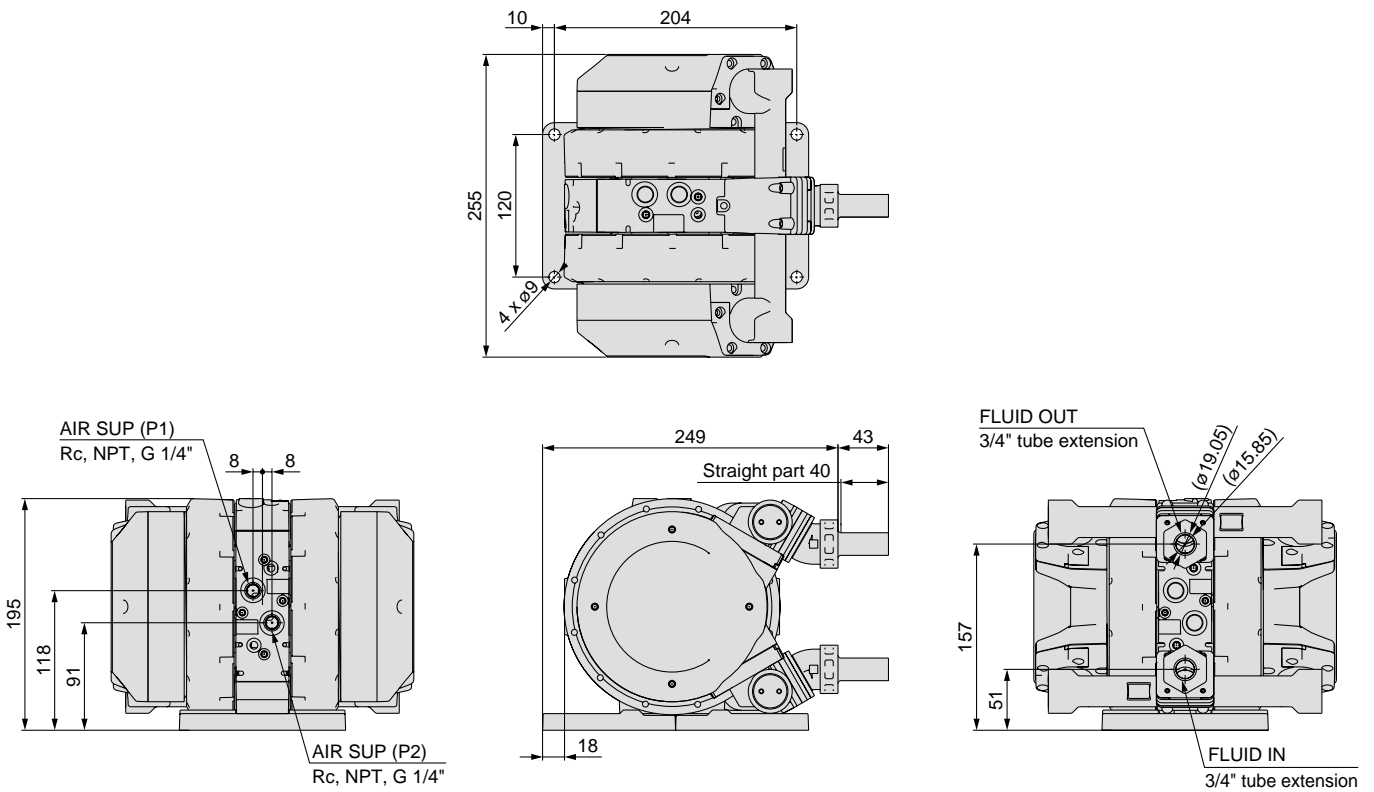

**Dimensions: Air Operated Type (Series PAF5000)**

With nut (with LQ1 fittings): PAF5413S-1S19□  
PAF5413S-1S25□

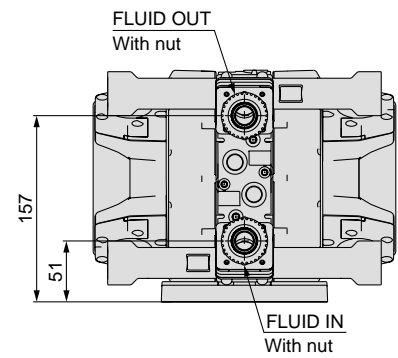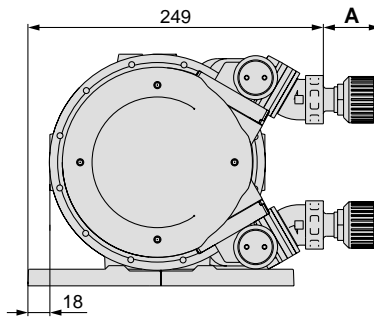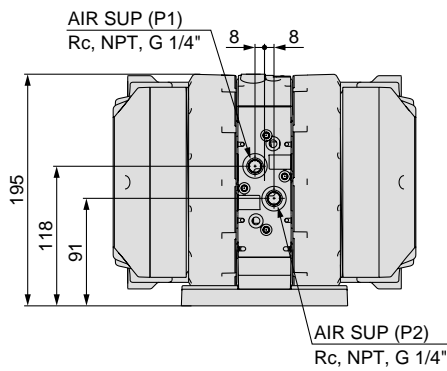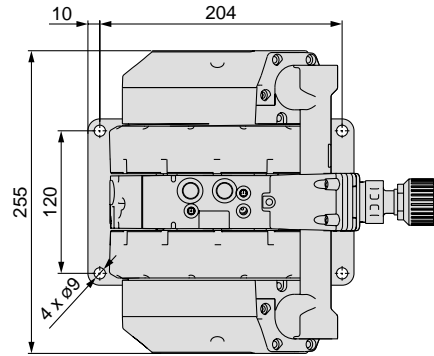


**Tube Size Applicable for Nut Size**

(Tube size can be altered, using a reducer even within the same nut size.)

Model	(mm)
PAF5413S-1S19□	A
PAF5413S-1S25□	48
	55

Size	Applicable tubing size
5	12 x 10, 19 x 16, 1/2" x 3/8", 3/4" x 5/8"
6	19 x 16, 25 x 22, 3/4" x 5/8", 1" x 7/8"

With nut (with LQ3 fittings) : PAF5413S-3S19□

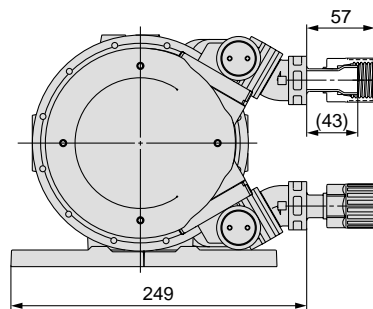

- PA
- PAP
- PAX
- PB
- PAF**
- PA□
- PB



Series PA□

# Product Specific Precautions 1

Be sure to read before handling.

Refer to front matters 42 and 43 for Safety Instructions.

## Caution on Design

### ⚠ Warning

#### 1. Confirm the specifications.

Give careful consideration to operating conditions such as the application, fluid and environment, and use the product within the operating ranges specified in this catalog.

#### 2. Fluids

- For the compatibility between the materials composing the product and the fluids, check the compatibility check list. Since the compatibility of the fluid used may vary depending on its type, additives, concentration, temperature, etc., give sufficient consideration when selecting the material.
- For fluids other than those listed on the check list, please consult us. Also, use them within the range of the operating fluid temperatures.
- If foreign matters are mixed in the fluid, these may cause abrasion of the inside of the pump resulting in a problem. Use an appropriate filter (strainer) to remove them. In general, 80 to 100 mesh (150 to 180 μm) filters are recommended.
- When transferring a coagulable liquid, take measures to prevent it from coagulating in the pump.

#### 3. Water hammer

If a valve is operated abruptly etc., a high pressure may be applied due to water hammer. Take measures to prevent pressures higher than specified from being applied.

<Examples of measures>

- Use a water hammer resistant valve to reduce the valve closing speed.
- Use an elastic piping material such as rubber hose or an accumulator to absorb the impact pressure.

#### 4. Liquid seals

Provide a relief valve in the system to prevent it from becoming a liquid-sealed circuit.

#### 5. Fluid pressure

Do not pressurize or decompress the fluid supplied.

#### 6. Ensure space for maintenance.

Secure the space required for maintenance and inspection. Take into consideration also leakage from the product. When transferring a flammable liquid or a liquid that may affect the human body or environment, take measures including fire ban and keeping the area off limits.

#### 7. Use a design which prevents reverse pressure and reverse flow.

If reverse pressure or flow occurs, this can cause equipment damage or malfunction, etc. Take safety measures in designing the circuit.

#### 8. Measures against static electricity

Take measures against static electricity as static electricity may occur depending on the fluid.

#### 9. Cannot be used for transferring gases.

If transferring gases, the product cannot provide sufficient transfer volume as it should due to the nature of compression. Besides, as the operational cycle is too short, unexpected malfunctions may occur within short periods of time. Therefore, do not operate the product for a long period of time with no liquid inside or with gas-liquid mixing.

#### 10. Condensation and freezing of the pilot port

For the automatically operated type, the location around the switching valve and the air exhaust port can cool down quickly due to expansion of the supply air, and this may cause condensation on the piping and the condensation may freeze during operation in winter. Take measures to ensure that water droplets from condensation are not splashed onto any electric parts or equipment.

### ⚠ Caution

#### 1. Suspension of the pump operation

- When the process pump is started or stopped by the pilot air for the automatically operated type, use a 3-port solenoid valve to discharge the residual pressure. If the pump should stop while consuming the residual pressure, the built-in pilot air switching unit may become unstable and unable to be restarted. If it cannot be restarted, press the reset button.
- For the air operated type, combine an exhaust center 5-port solenoid valve or a 3-port solenoid valve for residual pressure release and a 4-port solenoid valve for driving the pump to discharge the residual pressure inside the pump when stopping it. If the pump is pressurized during suspension, its life will become shorter.

#### 2. Use the constant pilot air pressure.

The automatically operated type of some models adopts an air spring for the built-in air control circuit, and the pump may malfunction and stop when the pilot air pressure fluctuation exceeds 50 kPa.

PA

PAP

PAX

PB

PAF

PA□  
PB



## Series PA□

# Product Specific Precautions 2

Be sure to read before handling.

Refer to front matters 42 and 43 for Safety Instructions.

### Mounting

#### ⚠ Caution

##### 1. Read the instruction manual before mounting the product.

Read the instruction manual carefully and understand the contents before mounting the product. The manual should also be kept where it can be referred to whenever necessary.

##### 2. Open the sealed package inside a clean room.

Products specified for clean room are sealed and double packaged inside a clean room. We recommend that the inner package should be opened inside a clean room or clean environment.

##### 3. Confirm the mounting orientation of the product.

Since the mounting orientation varies depending on the product, check it in the instruction manual or the specifications herein.

Also, secure all specified mounting positions when using the product.

If the propagation of the vibration of the pump is not acceptable, insert vibro-isolating rubber when mounting.

### Piping

#### ⚠ Caution

##### 1. Flush the piping.

Flush and clean the piping before connecting the product. Any dirt or scale and the like left in the piping may cause malfunction or failure.

##### 2. Use fittings with resin threads when connecting piping to the product with resin threads at the ports.

Using fittings with metal threads may cause damage to the ports.

##### 3. Tighten screws with proper tightening torque.

When screwing fittings into the product, tighten them with proper tightening torque as shown below.

#### PA3000, PA5000, PAX1000

Connection thread	Proper tightening torque (N·m)
Rc, NPT, G, NPTF 1/4	12 to 14
Rc, NPT, G, NPTF 3/8	22 to 24
Rc, NPT, G, NPTF 1/2	28 to 30
Rc, NPT, G, NPTF 3/4	28 to 30

#### PAX1000

Connection thread	Proper tightening torque (N·m)
M5	1/6 turn after tightening by hand
Rc, NPT, G, NPTF 1/8	2 to 3

#### PA3300, PAP3300, PAF3000, PAF5000

Connection thread	Proper tightening torque (N·m)
Rc, NPT, G, NPTF 1/8	0.4 to 0.5
Rc, NPT, G, NPTF 1/4 (PAF3000)	0.8 to 1
Rc, NPT, G, NPTF 1/4	1.5 to 2
Rc, NPT, G, NPTF 3/8	2 to 2.5
Rc, NPT, G, NPTF 3/4	4 to 5

### Air Supply

#### ⚠ Warning

##### 1. Use clean air.

Do not use compressed air that includes chemicals, synthetic oils containing organic solvents, salinities or corrosive gases, etc., as it can cause damage or malfunction.

##### 2. Pay attention to avoid freezing when operating the product in low temperatures.

The equipment operates while expanding the compressed air. During this time, the temperature inside the product decreases due to adiabatic expansion. If the ambient temperature is low, using compressed air containing a lot of moisture may cause freezing because heat cannot be gained from the surroundings. In this case, take freeze prevention measures by using a membrane air dryer (such as series IDG).

#### ⚠ Caution

##### 1. Quality of operating air

- Be sure to use only air filtrated by a micro mist separator (such as series AMD). Use of a super mist separator (such as series AME) is recommended to extend maintenance intervals.

- If a pump is operated by dried air and N<sub>2</sub> gas, etc., the deterioration of the gaskets inside the switching valve will be accelerated and may result in substantially shortening the life span of the product.

### Operating Environment

#### ⚠ Warning

##### 1. Do not use in the following environments, as this can cause failure.

- Locations with an atmosphere of corrosive gases, organic solvents or chemical solutions, and where there may be contact with the same.
- Locations where there is contact with sea spray, water or steam.
- Locations where ultraviolet deterioration or overheating of resin may occur due to direct sunlight.
- Locations near heat sources with poor ventilation (heat sources should be shielded by heat insulating material).
- Locations with impact or vibration.
- Locations with excessive moisture and dust.

##### 2. The product cannot be used under water.

Do not use the product immersing it in water (liquid). Otherwise, liquid will enter the openings inside the product, resulting in malfunction.

##### 3. Compressed air with low dew point

Using super dry air as the fluid may affect the reliability (service life) of the equipment, because the lubrication characteristics inside the equipment will deteriorate. Please consult with SMC when using it.





# Series PA□

## Product Specific Precautions 3

Be sure to read before handling.

Refer to front matters 42 and 43 for Safety Instructions.

### Maintenance

#### Warning

##### 1. Perform maintenance after consulting the instruction manual.

Obtain the instruction manual for the equipment from SMC or our distributor and have sufficient knowledge of the equipment before performing maintenance. Incorrect handling may cause damage or malfunction of the equipment or system.

##### 2. Perform maintenance work after confirming the safety of the system.

Turn off the compressed air and power supply and exhaust any remaining compressed air in the system before removing the equipment and the compressed air supply/exhaust unit. Discharge the residual liquid or sufficiently displace it as necessary. Also, when reinstalling the equipment or restarting it after replacement, confirm the safety of the product before checking that it operates normally.

##### 3. Do not disassemble the product, as disassembly will invalidate the product's warranty.

When disassembly is necessary, please consult with SMC or our distributor.

##### 4. Drain discharge

Operating the system with drain accumulated in the equipment or piping may cause malfunction of the equipment, splash over into the downstream side, or unexpected accident. Periodically discharge drain from components including the air filter.

##### 5. Caution when transferring a high-temperature fluid

The product itself will become hot due to the high-temperature fluid. Since touching the product directly may cause burns, allow sufficient time for the product to cool down when transferring a high-temperature fluid. The measurement of the product temperature is recommended to confirm the safety of the system before performing work.

##### 6. Caution when a temperature history cycle is applied.

When a temperature history (heat cycle) is applied for Series PAF3000/5000, the resin thread may extend. Additionally tighten with the specified torque (M3: 0.11 to 0.12 N·m) to prevent liquid leakage.

#### Caution

##### 1. Caution when transferring a highly penetrating liquid

When transferring a liquid that is highly penetrating through fluoropolymer, components of the transfer liquid may enter the openings inside the equipment. Also, they may become attached to the external surface of the equipment. In this case, take the same measures as handling the transfer liquid.

### Maintenance

#### Caution

##### 2. Service life of diaphragm and maintenance of consumable items

- Regular maintenance is required for items including diaphragms, check valves, switching valves, pilot valves and manual caps.
- If the operating cycle of the process pump exceeds the service life of diaphragm, the diaphragm may be damaged due to deterioration. If it is damaged, the fluid will leak from the pilot air exhaust port and the air will blow out into the liquid circuit. Consider the pump operation (breathing, decline of discharge pressure, etc.) and the reference service life of diaphragm, and conduct necessary maintenance as early as possible.
- Items such as check valves, switching valves, pilot valves and manual caps may experience malfunction earlier than the diaphragm depending on the operating conditions. Please conduct periodic maintenance.
- When conducting maintenance, obtain the necessary parts indicated in the maintenance parts list (see page 727), and perform work according to the maintenance and instruction manuals.

##### [Calculation of reference service life (days) of diaphragm]

<Automatically operated type>

Reference service life (days) =

$A \text{ (amount of discharge per cycle)} \times B \text{ (reference number of cycles in service life)}$

$\text{Flow (l/min)} \times \text{Operating time per day (hour)} \times 60 \text{ (min)}$

<Air operated type>

The amount of discharge per cycle for the air operated type varies depending on the piping resistance. Therefore, calculate the service life (days) using the operating frequency of a solenoid valve.

Reference service life (days) =

$B \text{ (reference number of cycles in service life)}$

$\text{Operating frequency of solenoid valve (Hz)} \times 60 \text{ (sec)} \times \text{Operating time per day (hour)} \times 60 \text{ (min)}$

Model	Operating method	Diaphragm material	Amount of discharge per cycle A	Reference number of cycles in service life B	Volume inside pump (wetted part)
PA3□10	Automatically operated type	PTFE	Approx. 0.04 ℓ	100 million cycles	Approx. 75 mℓ
PA3□20		NBR		50 million cycles	
PA3□13	Air operated type	PTFE	Approx. 0.022 ℓ *	50 million cycles	
PA5□10	Automatically operated type	PTFE	Approx. 0.10 ℓ	50 million cycles	Approx. 315 mℓ
PA5□20		NBR			
PA5□□3	Air operated type	PTFE	Approx. 0.09 ℓ *		
PA (P) 3310	Automatically operated type	PTFE	Approx. 0.025 ℓ	50 million cycles	Approx. 85 mℓ
PA (P) 3313	Air operated type		Approx. 0.037 ℓ		
PAX1000	Automatically operated type	PTFE	Approx. 0.021 ℓ	50 million cycles	Approx. 90 mℓ
PB1011	Solenoid valve driving	PTFE	Approx. 0.004 ℓ	20 million cycles	Approx. 9 mℓ
PB1013	Air operated type		Approx. 0.004 ℓ		
PAF3410	Automatically operated type	PTFE	Approx. 0.054 ℓ	50 million cycles	Approx. 105 mℓ
PAF3413	Air operated type		Approx. 0.050 ℓ *		Approx. 100 mℓ
PAF5410	Automatically operated type	PTFE	Approx. 0.130 ℓ		Approx. 600 mℓ
PAF5413	Air operated type		Approx. 0.190 ℓ *		

\* The amount of discharge per cycle for the air operated type is indicated assuming no piping resistance.

PA

PAP

PAX

PB

PAF

PA□  
PB



Series PA□

## Product Specific Precautions 4

Be sure to read before handling.

Refer to front matters 42 and 43 for Safety Instructions.

### Lubrication

#### Caution

- 1. The pump can be used without lubrication.**  
Do not lubricate the air operated type, the PAF series.
- 2. If lubricating the pump, continue lubrication.**  
If lubricating a pump other than the air operated type or the PAF series, use turbine oil Class 1 (with no additives) ISO VG 32, and be sure to continue lubricating the pump.

### Caution on Handling

#### Warning

- 1. Test before using with the actual equipment.**  
Test the pump before using it with the actual equipment. Even if there is no problem in a short-term test, the liquid may penetrate through the fluoropolymer diaphragm causing malfunction in the pump air circuit.
- 2. Storage**  
In the case of long-term storage after use, first thoroughly remove the liquid, and clean and dry the inside to prevent deterioration of the pump materials.
- 3. After a long period of non-use, perform a trial run prior to operation.**